

POWERSTAR TRUCKS INDUSTY CO., LIMITED

Tel: 0086 136 7721 8585

Web: www.isuzutruckscn.com

POWERSTER

POWERSTAR Road Sweeper Body Kit

POWERSHIELD

POWERSWIR


User's Manual



POWERSTAR TRUCKS INDUSTRY CO., LIMITED

http://www.isuzutruckscn.com/



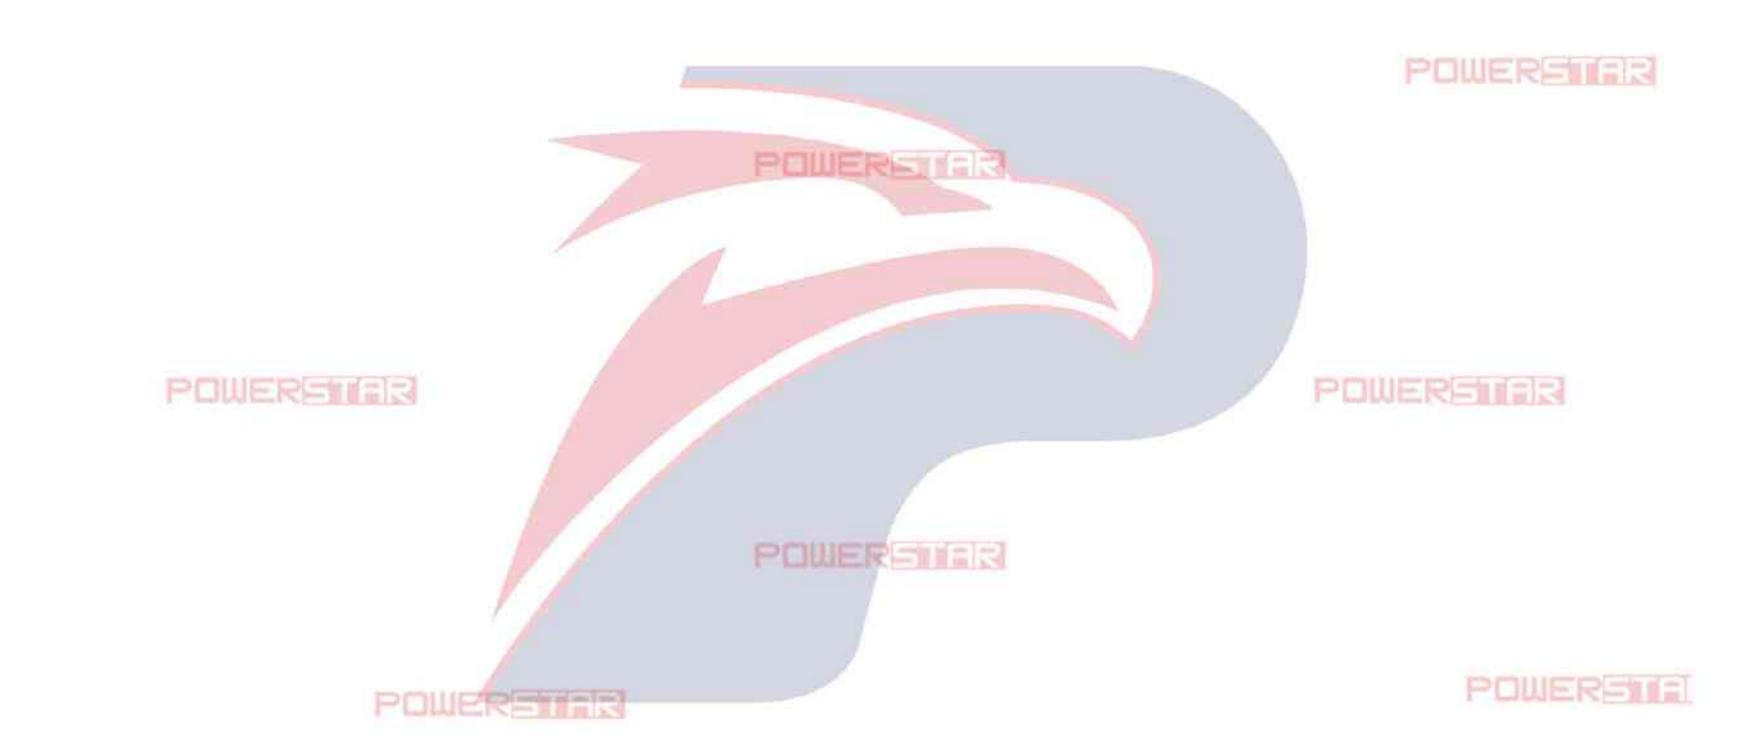



POWERSHER

POWERSHIELD





NOTE: Please read this document before install the Road Sweeper body

5m³ Road Sweeper Superstructure Spare Parts List

NO	Name	Unit Quantity	Total Quantity	Comments
1	Dust Tank Assembly	1 set	4 set	Installed
2	Clean Water Tank Assembly	1 set	4 set	Installed
3	Hydraulic Motor	4 unit	16 unit	Installed
4	Magnetic Valve	1 unit	4 unit Resident	Installed
5	Sweep Plate	4 set	16 set	Installed
6	Hydraulic Oil Cylinder	8 unit DILLERS	32 unit	Installed
7	Fan Assembly	1 set	4 set	Installed
8	Auxiliary Engine Assembly	1 set	4 set	Installed
9	Vacuum Suction Assembly	1 set	4 set	Installed
10	Auxiliary Frame Assembly	1 set	4 set	Installed
11	Vacuum Suction Pipeline	1 unit	4 unit	
12	Electric Control Box	1 unit	4 unit	
13	Main Control Box	1 unit	4 unit	
14	Rear Door Sealing Strip	1 unit	4 unit	
15	Water Pipeline	1 unit	4 unit	
16	PowThree-Way Valve	1 unit	POWE4 units	
17	Two-Way Valve	1 unit	4 unit	
18	Pipeline Hoop	1 unit	4 unit	
19	Compound Gasket	1 set	4 set	
20	Suction Plate Mudapron	1 unit	4 unit	
21	Diesel Pipeline	Tunit /	4 unit	
22	Sweep Brush	88 unit	Approx. 1350 unit	
23	CCD Camera System	1 set	4 set	

Please note that all spare parts in CHINA SHIPPING logo Container (Unique lock D23997)



Number 1-5 Road Sweeper Superstructure Brief Introduction

PULLERSIER

1. Tank Assembly:









POWEREMENT


2. Dust Bin Assembly









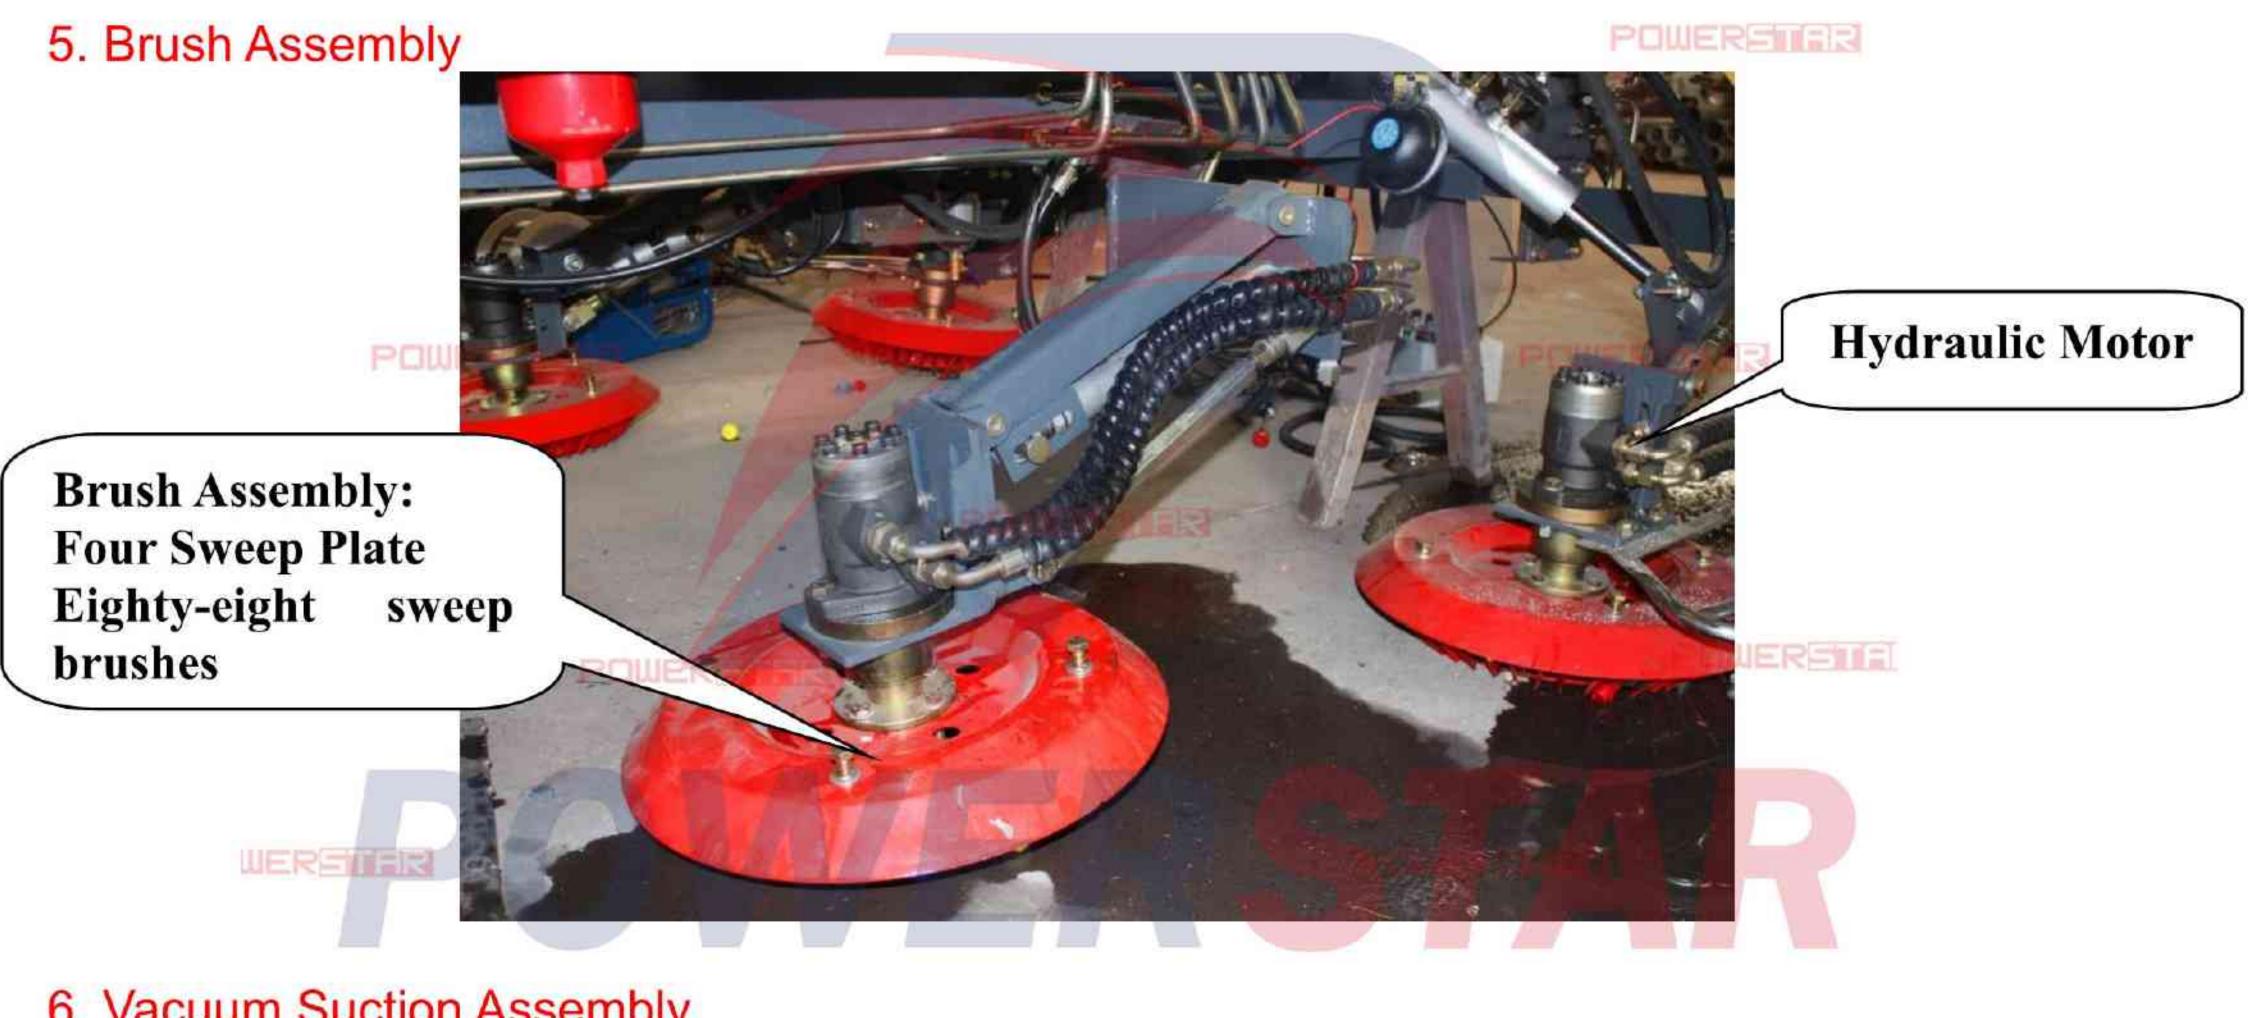






POWERSTIER

7. Control Assembly



Number 8-13 How to install the road sweeper superstructure (Very Important)

8. First and most important thing is take off the support steel (Place 1,2,3,4), and fix the road sweeper superstructure on your chassis.

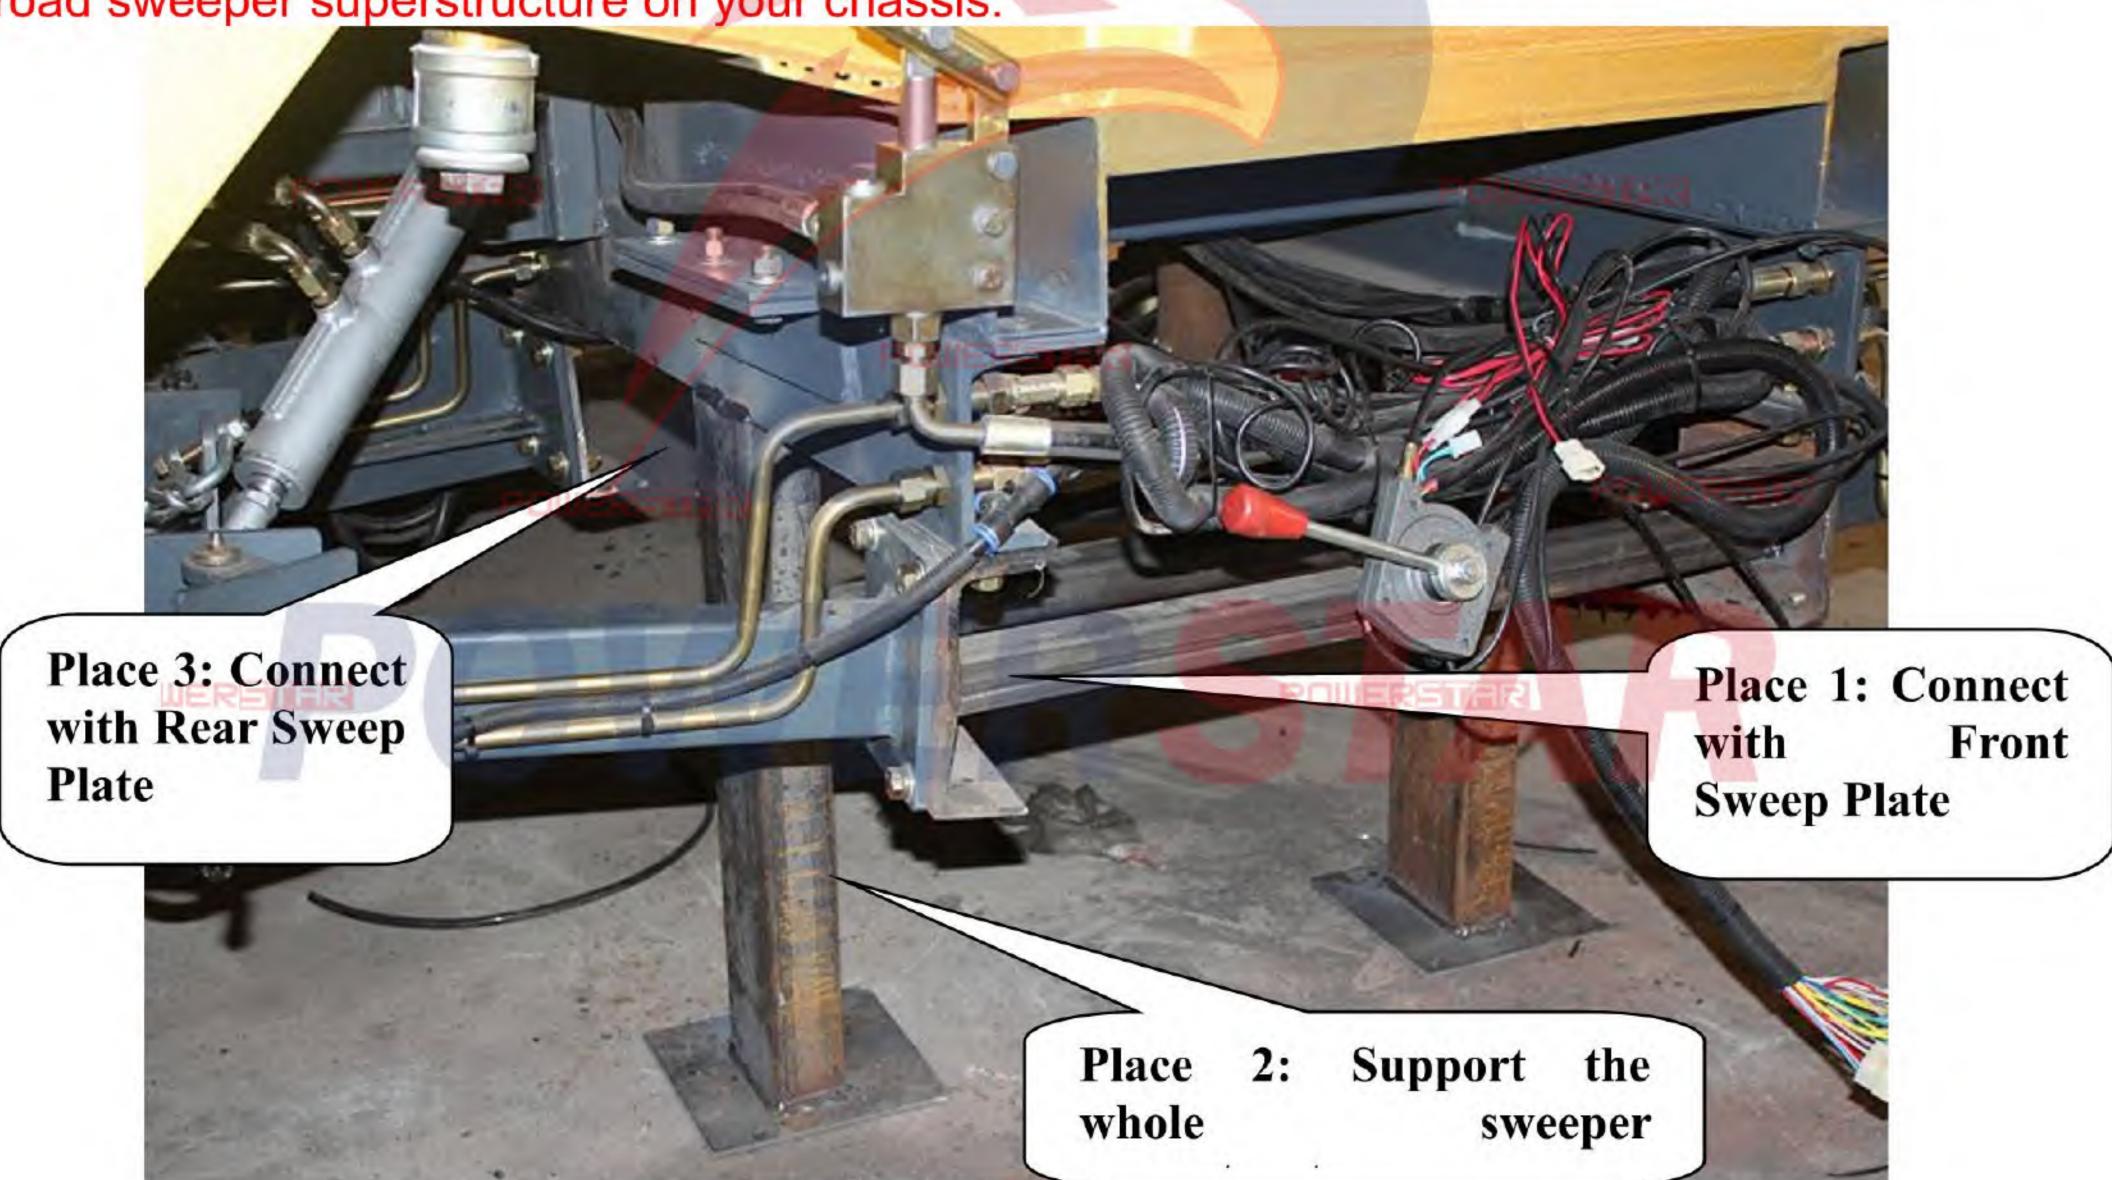






9. Fix Truck Chassis Battery & Fuel Tanker nearby auxiliary engine, detail place showing as below

Please note: JMC brand auxiliary engine use 12V Battery, means only need connect one battery with JMC engine

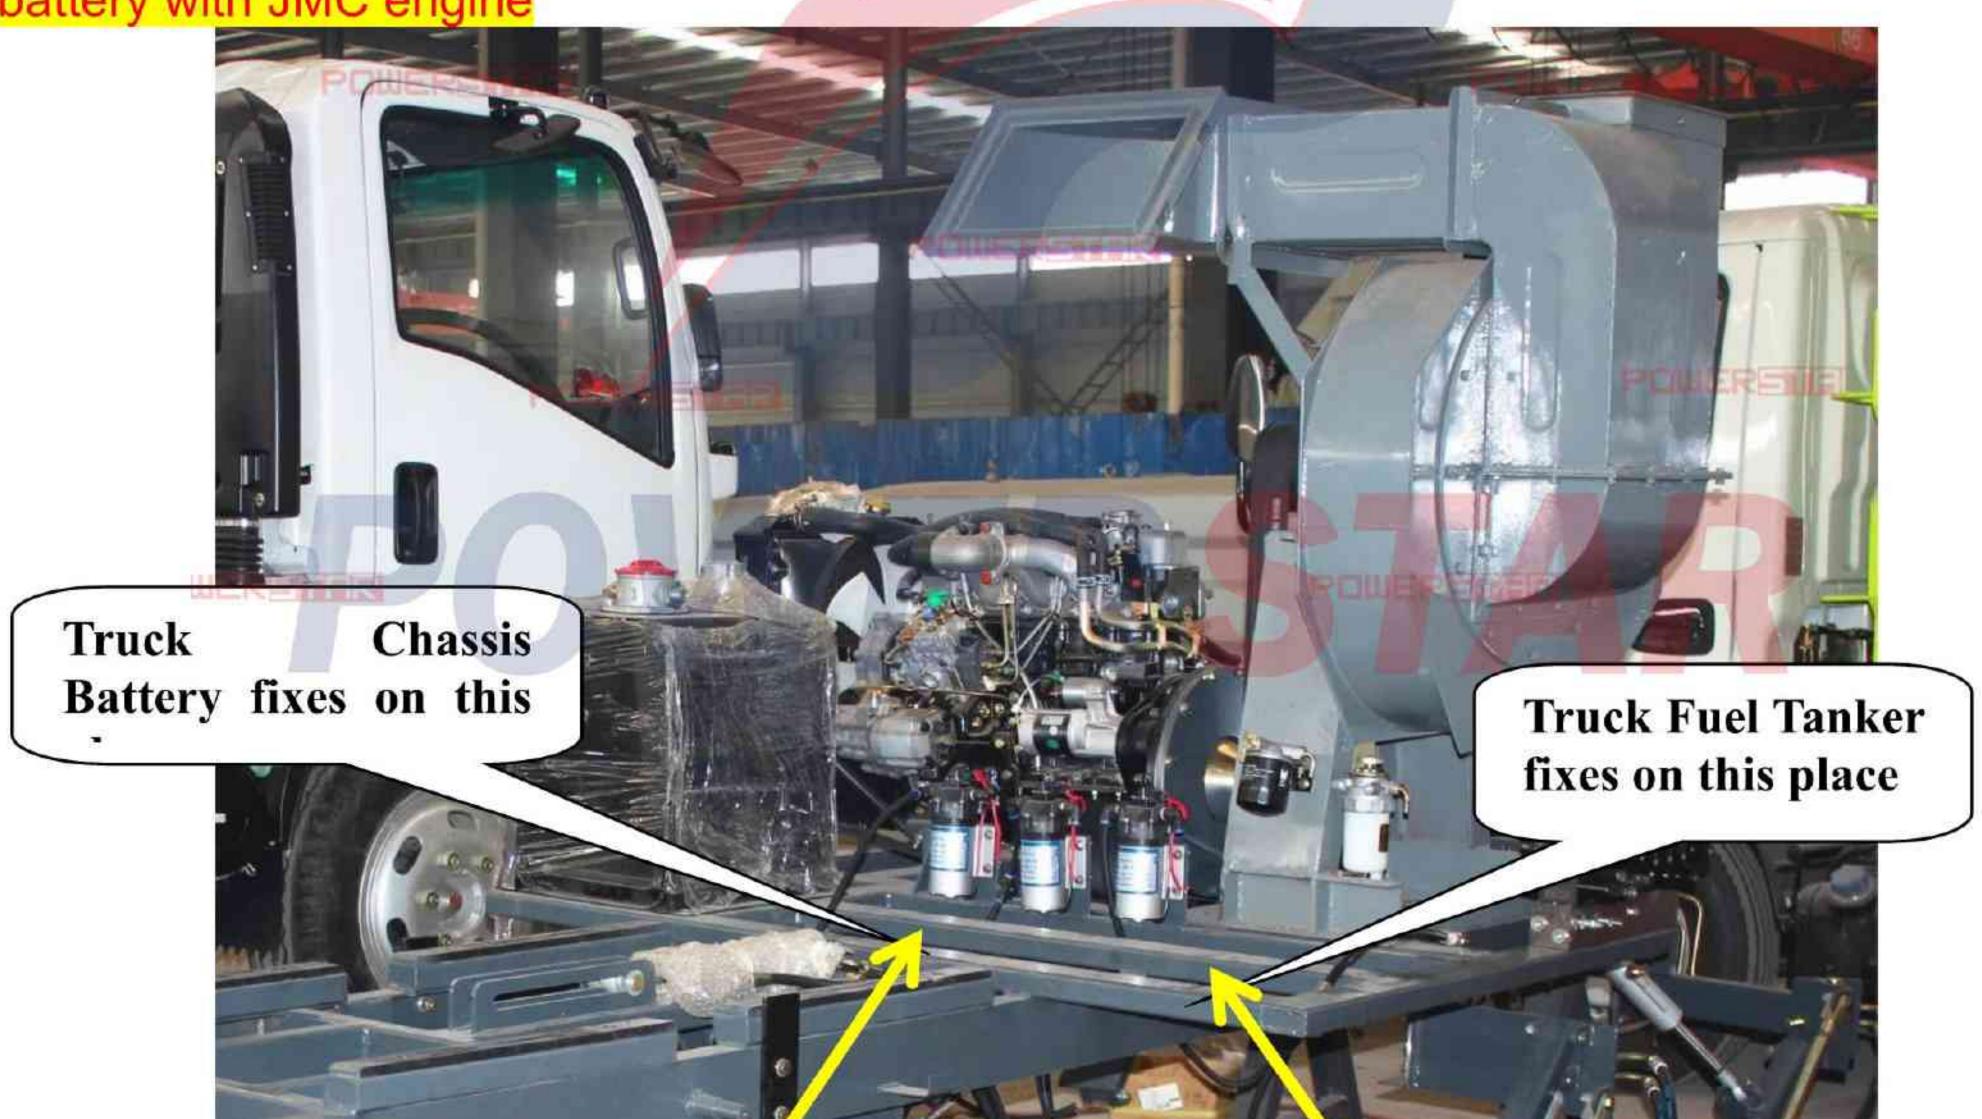



POWER-ILER


POWER-116




WERSTIER





0086 155 7227 0555 info@isuzutruckscn.com

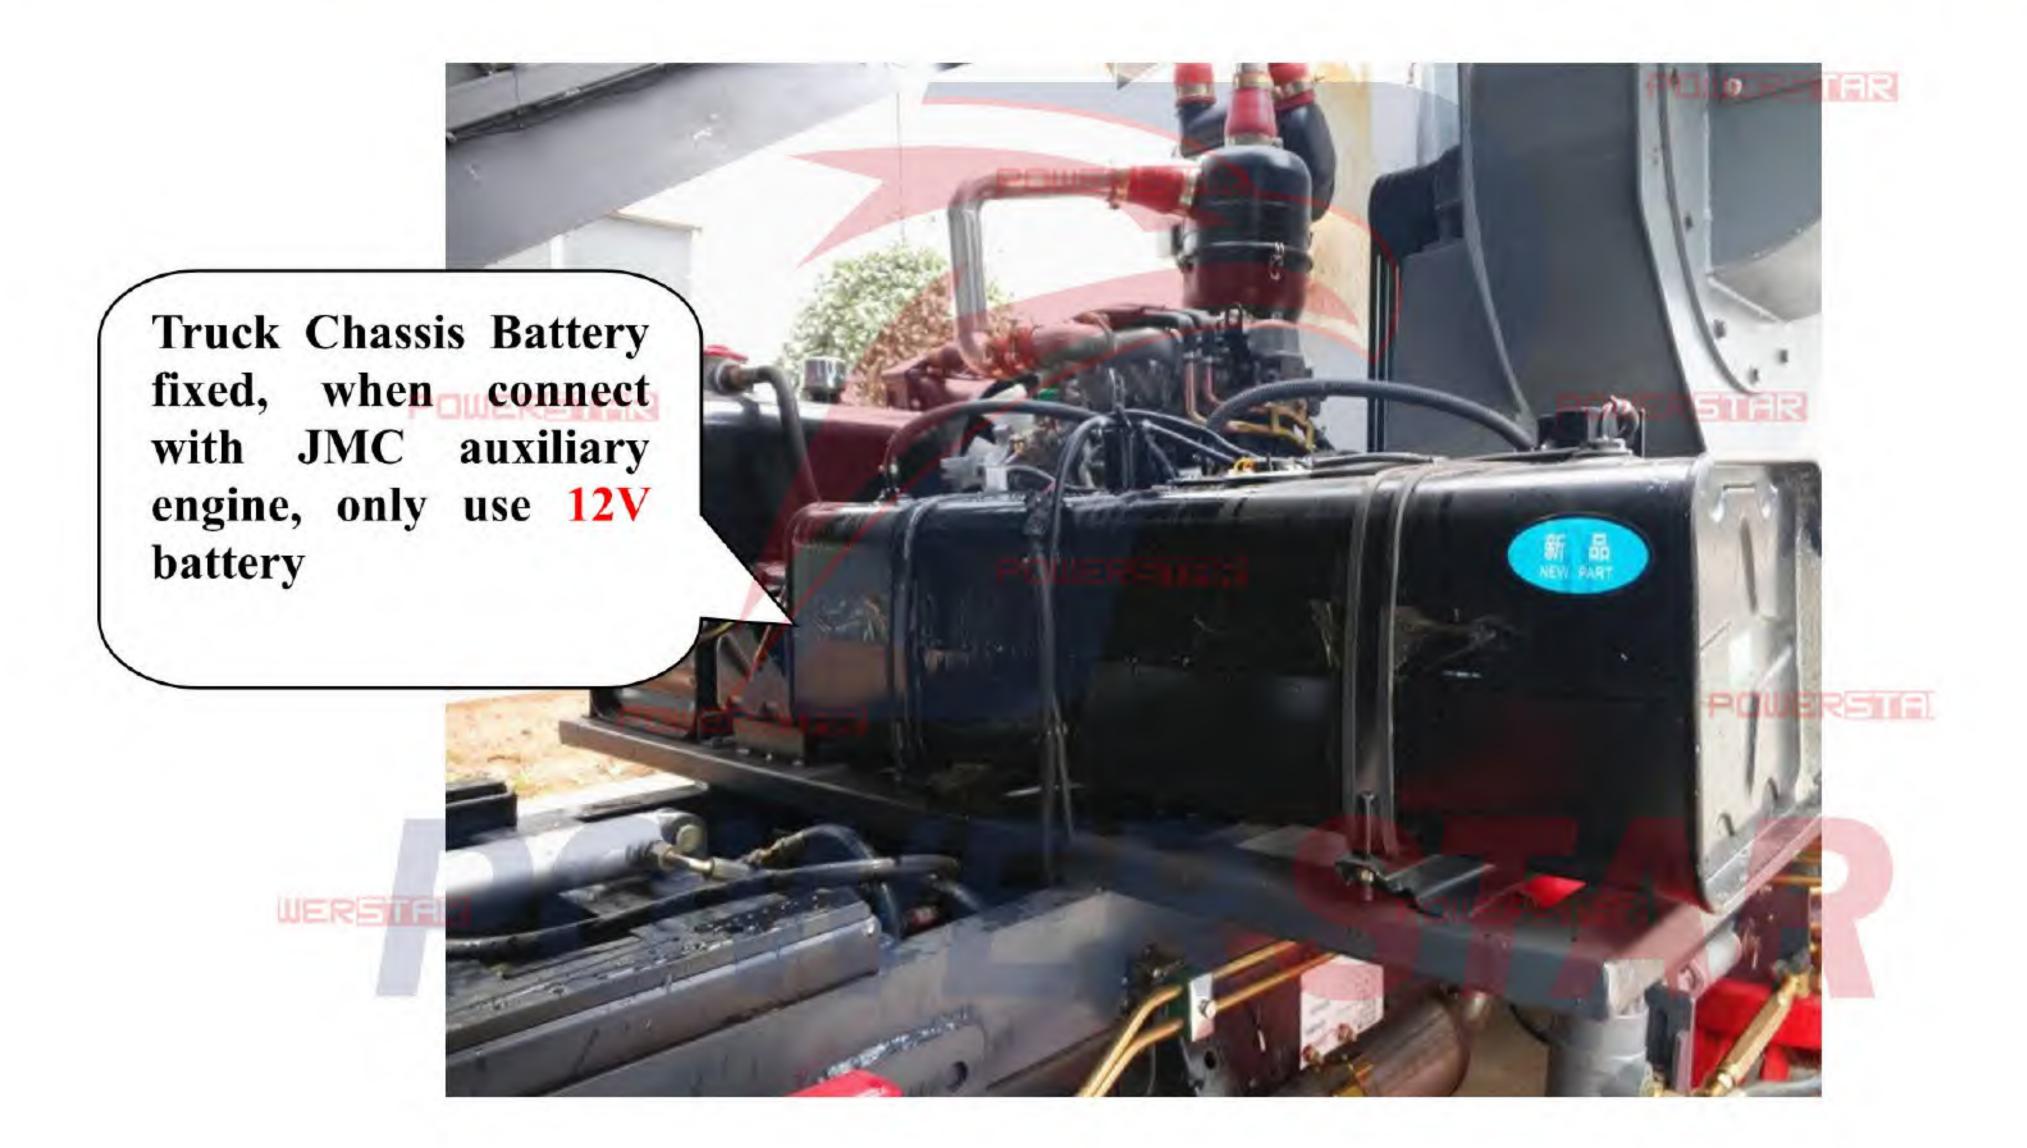

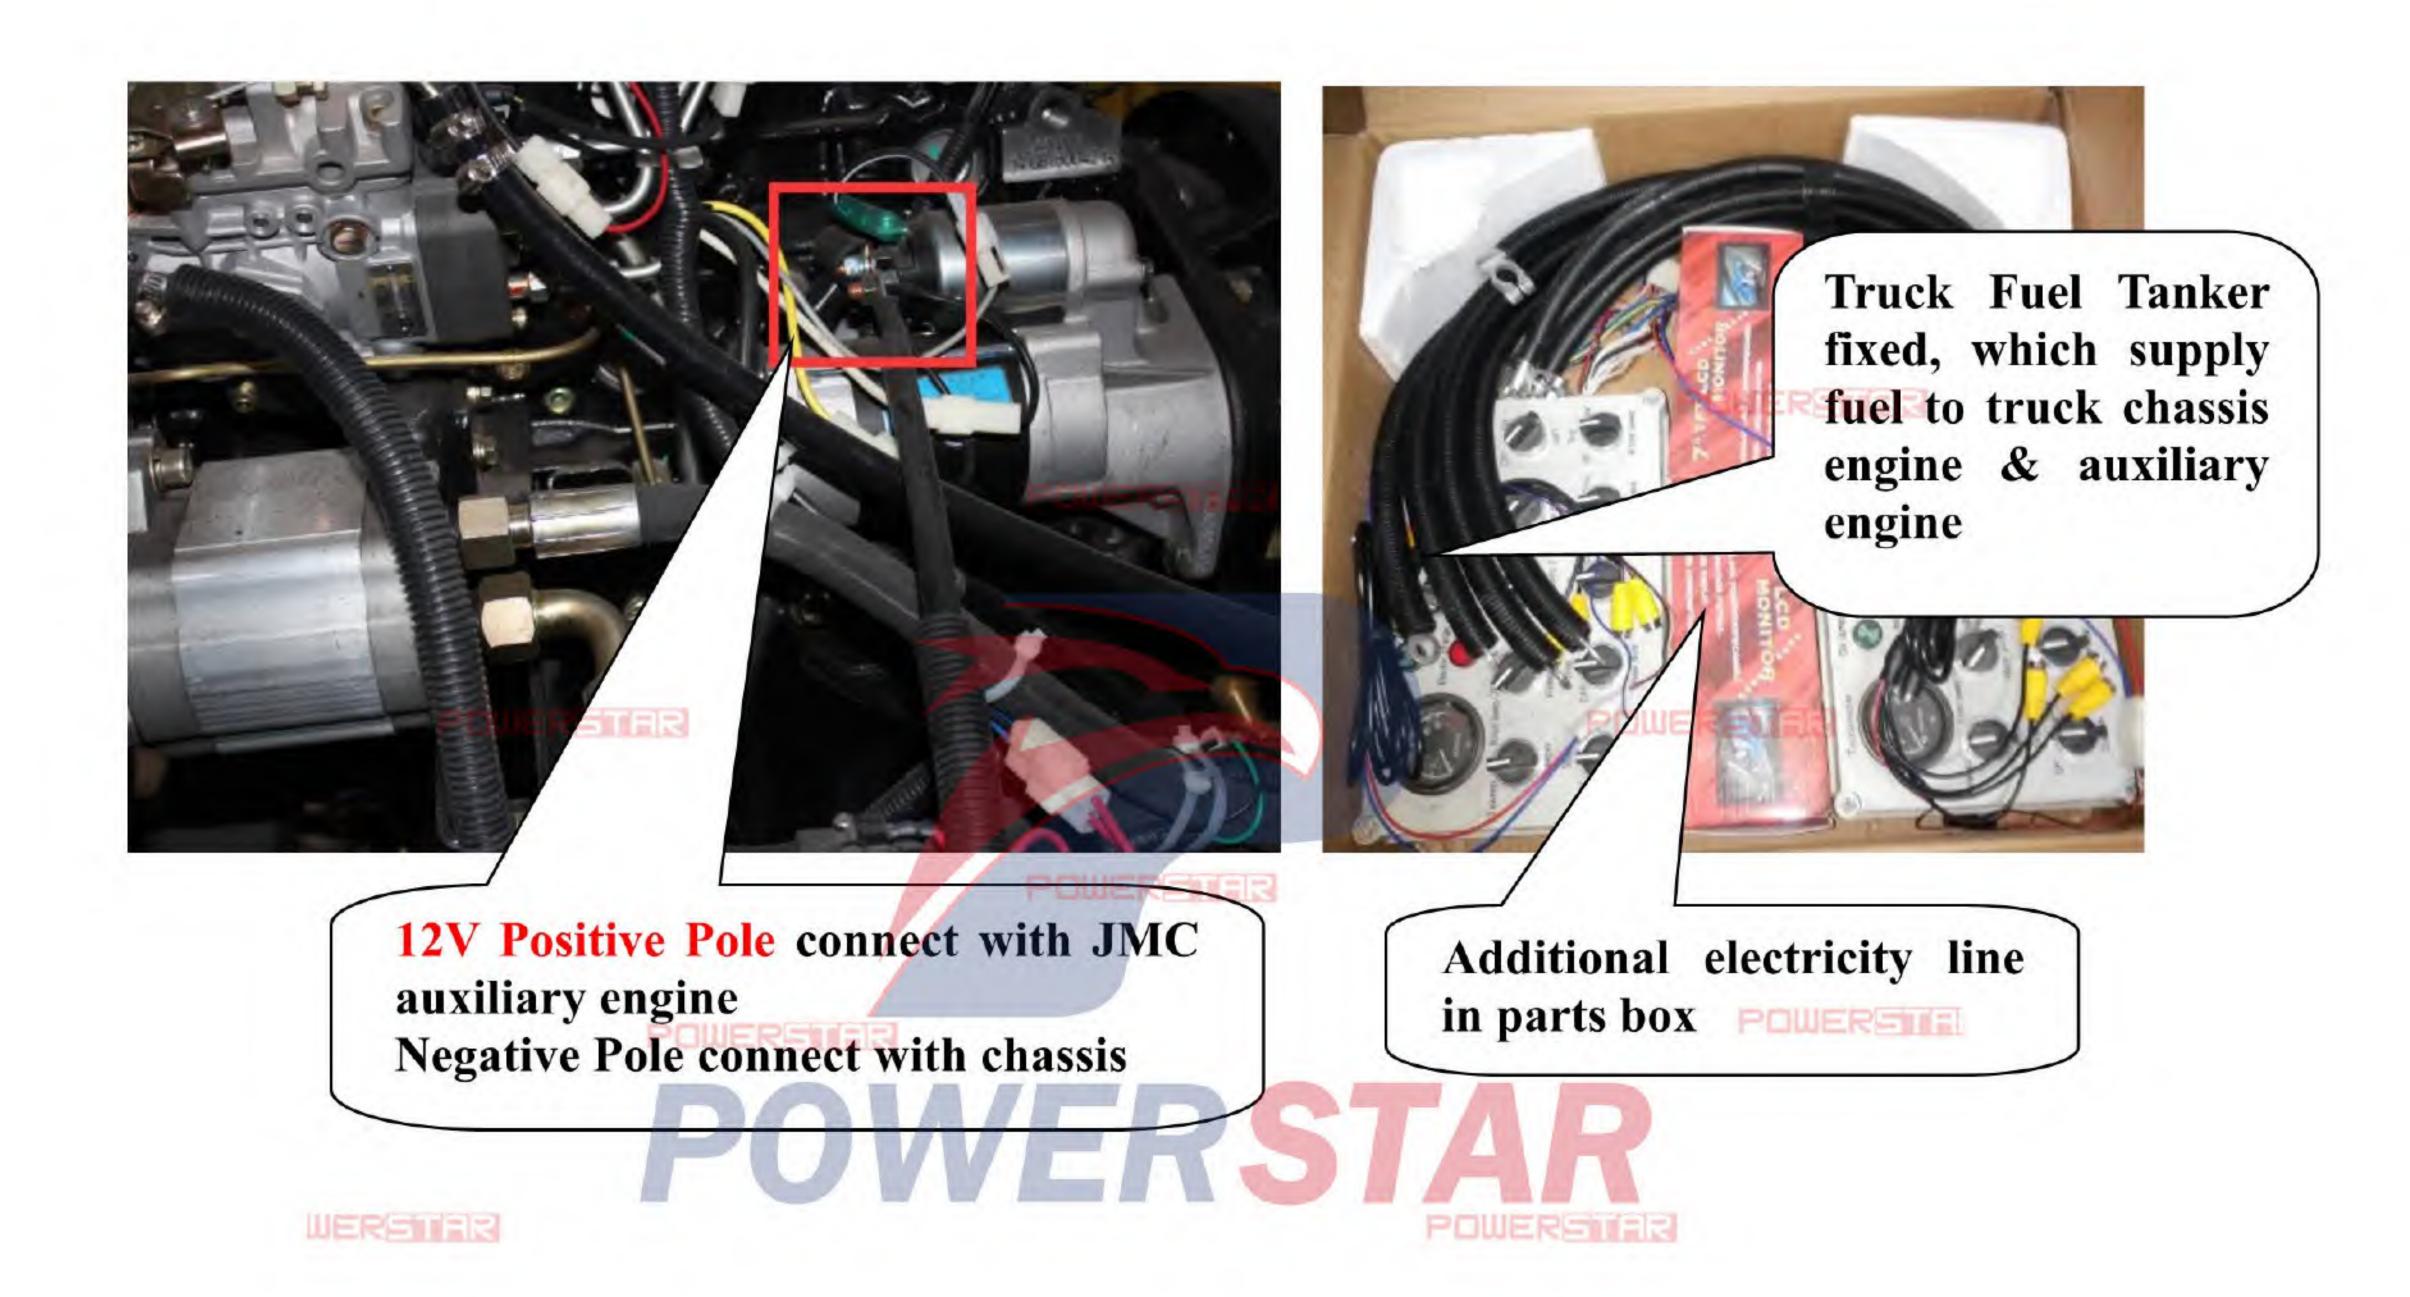



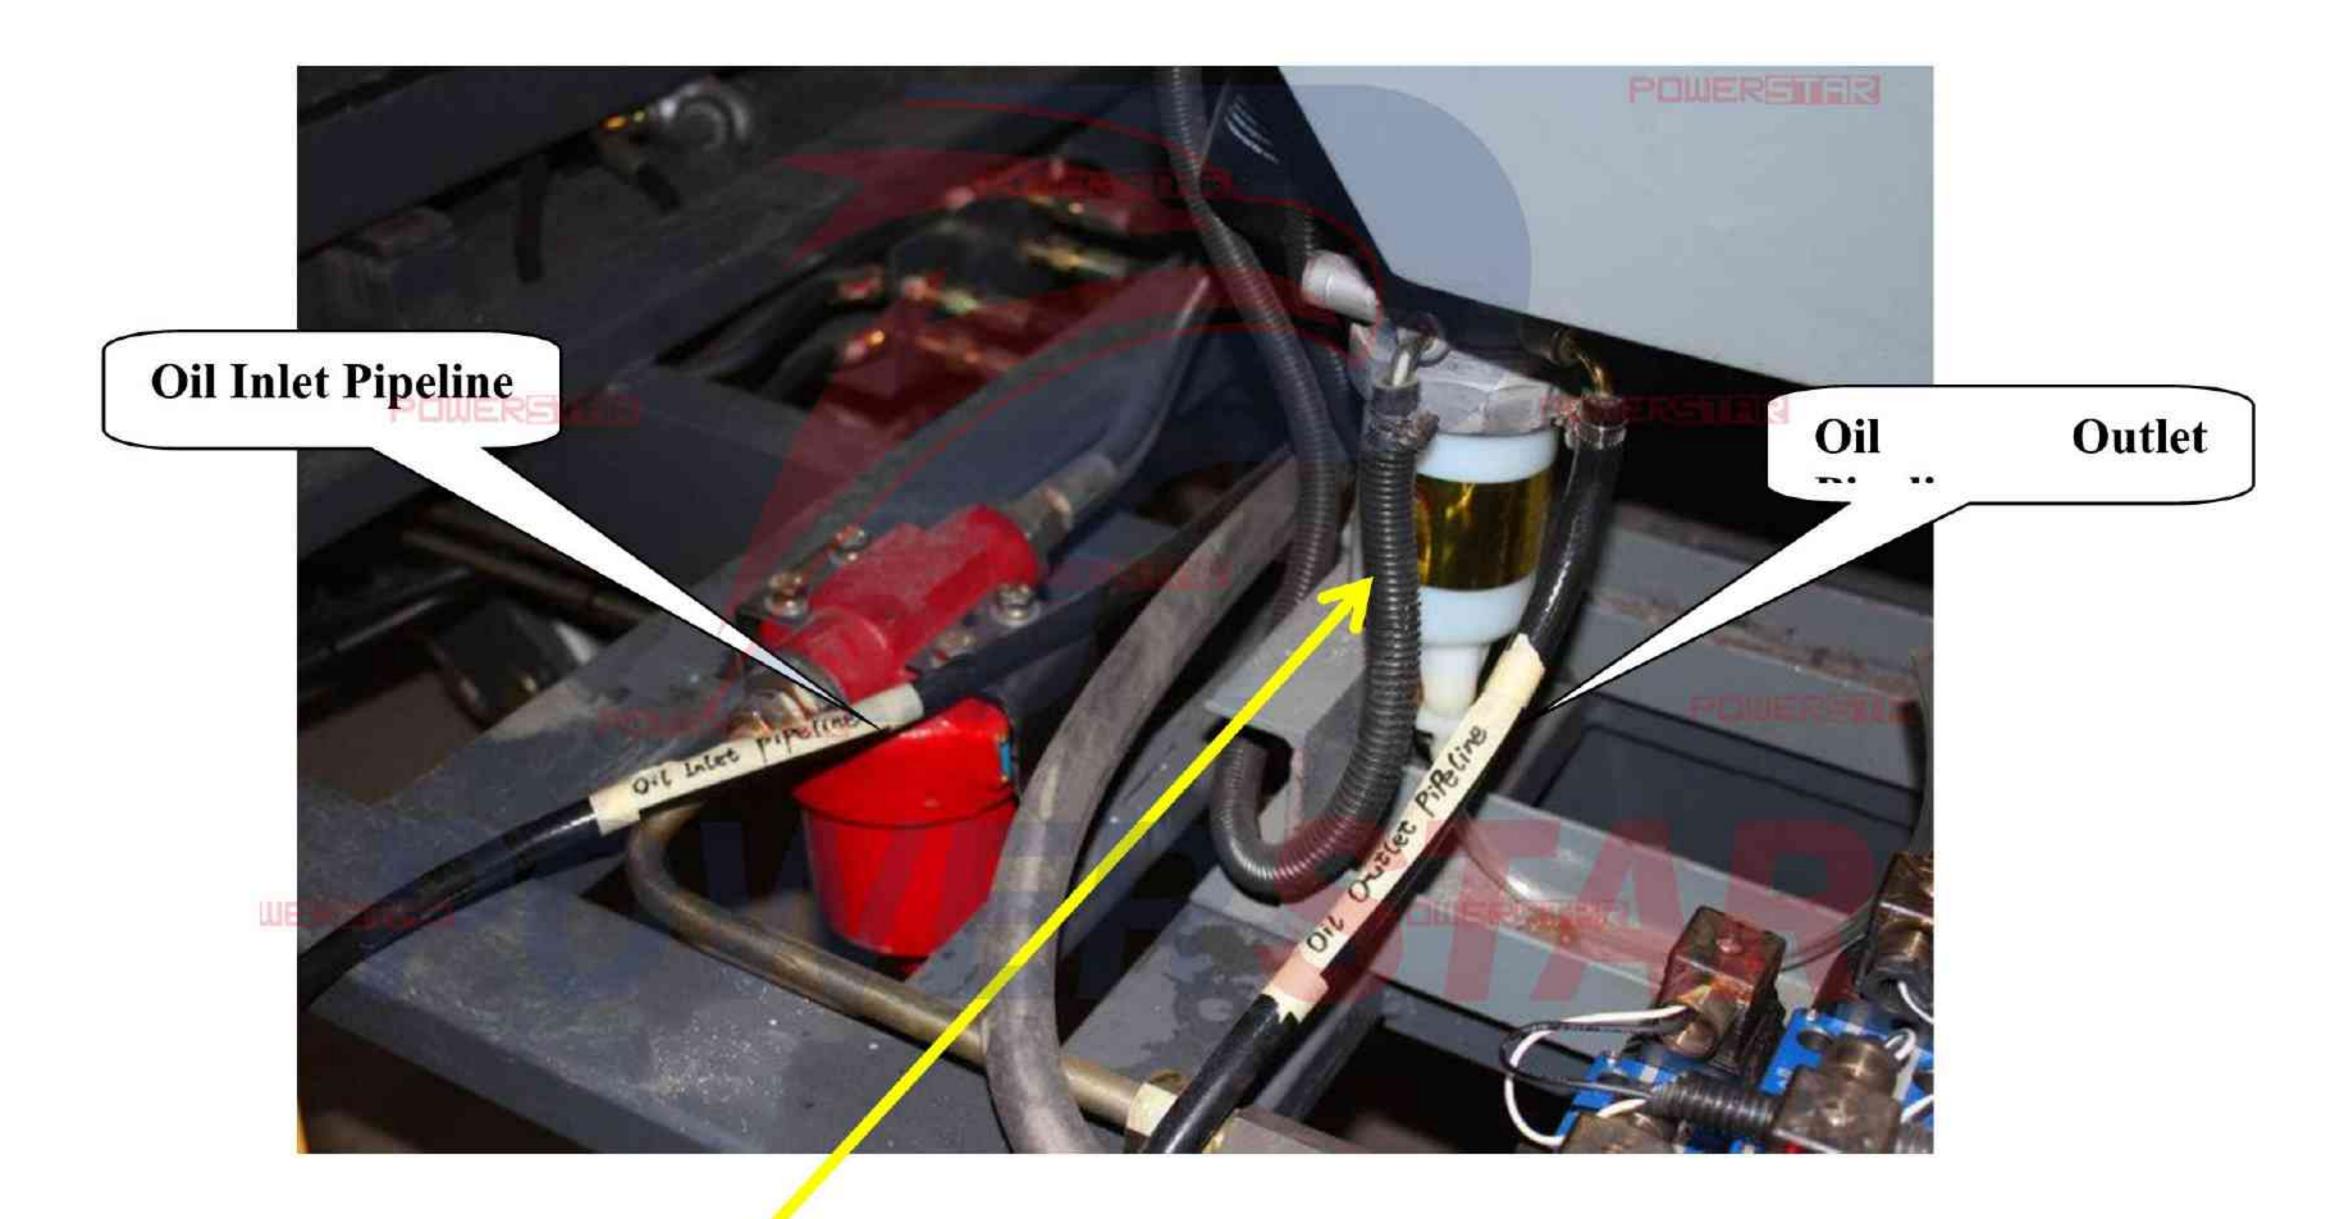

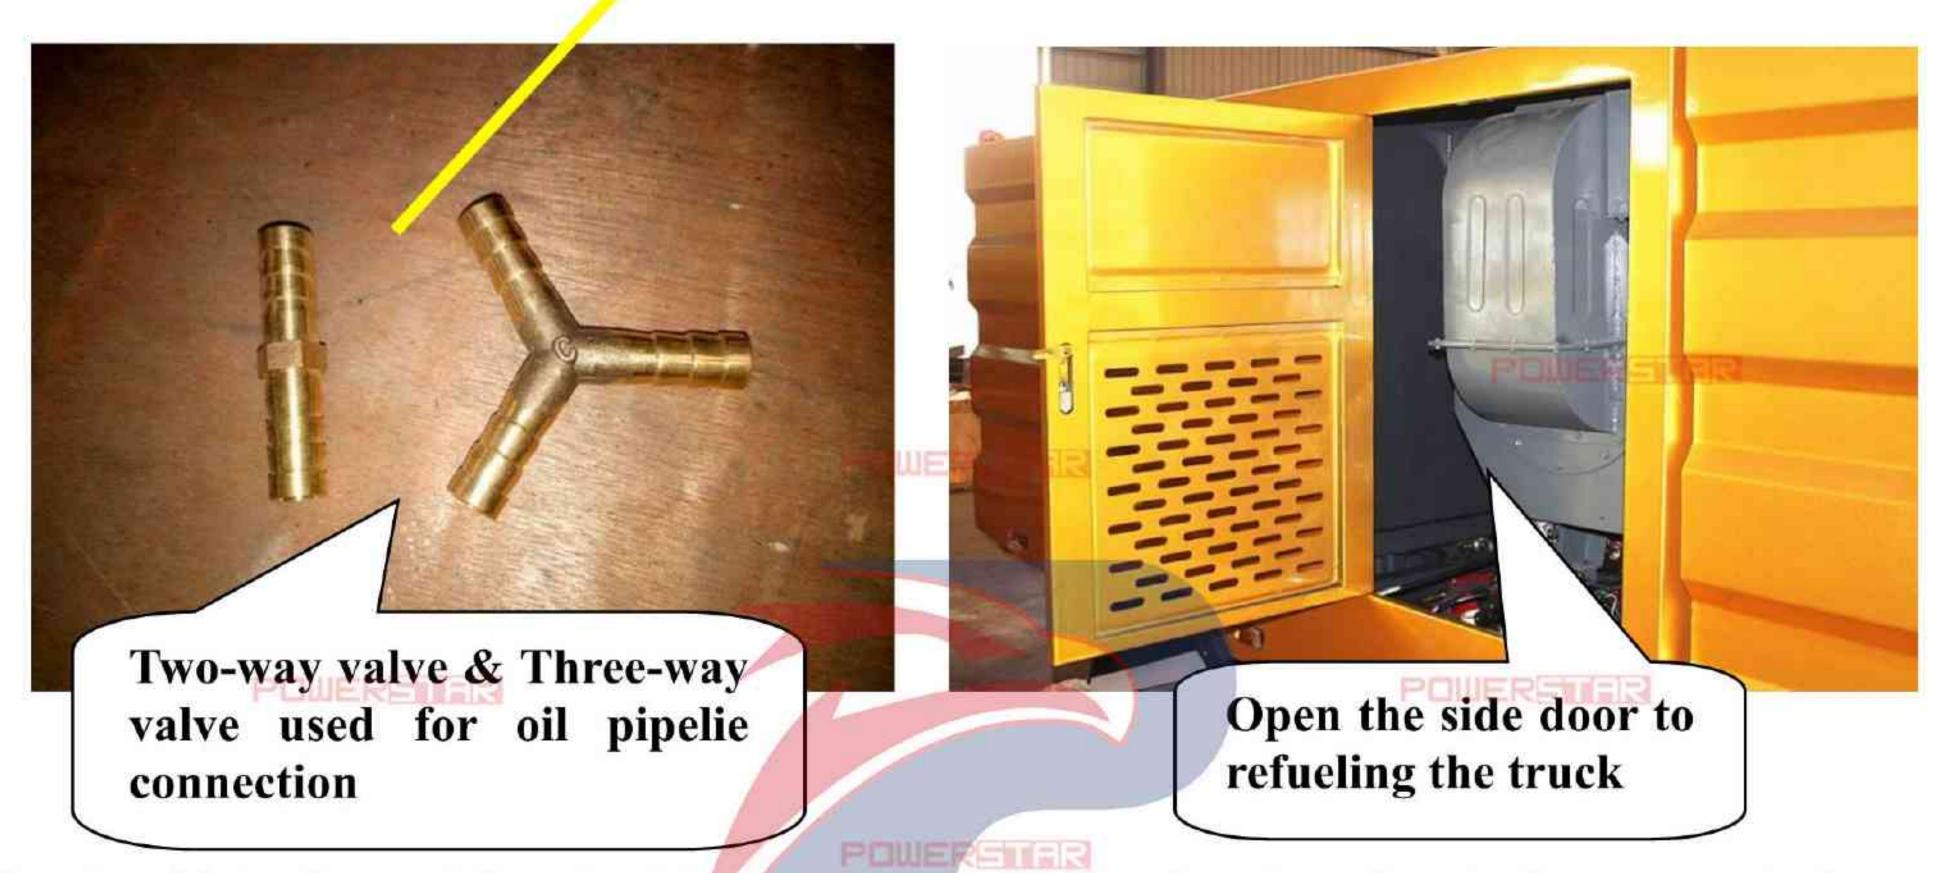

10. Put the Main Control Box in driver Cabin and collection the electric line properly for easy operation. POWER-ME


Please note: Main Control Box use 24V Battery, means can directly connect with chassis battery

WER-THER POWERSTAR

POWER-





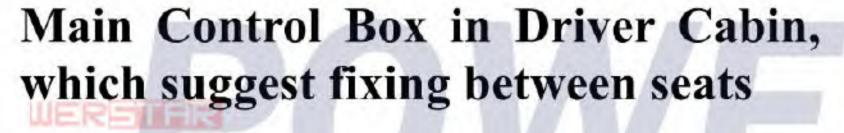




Connect the electric line properly






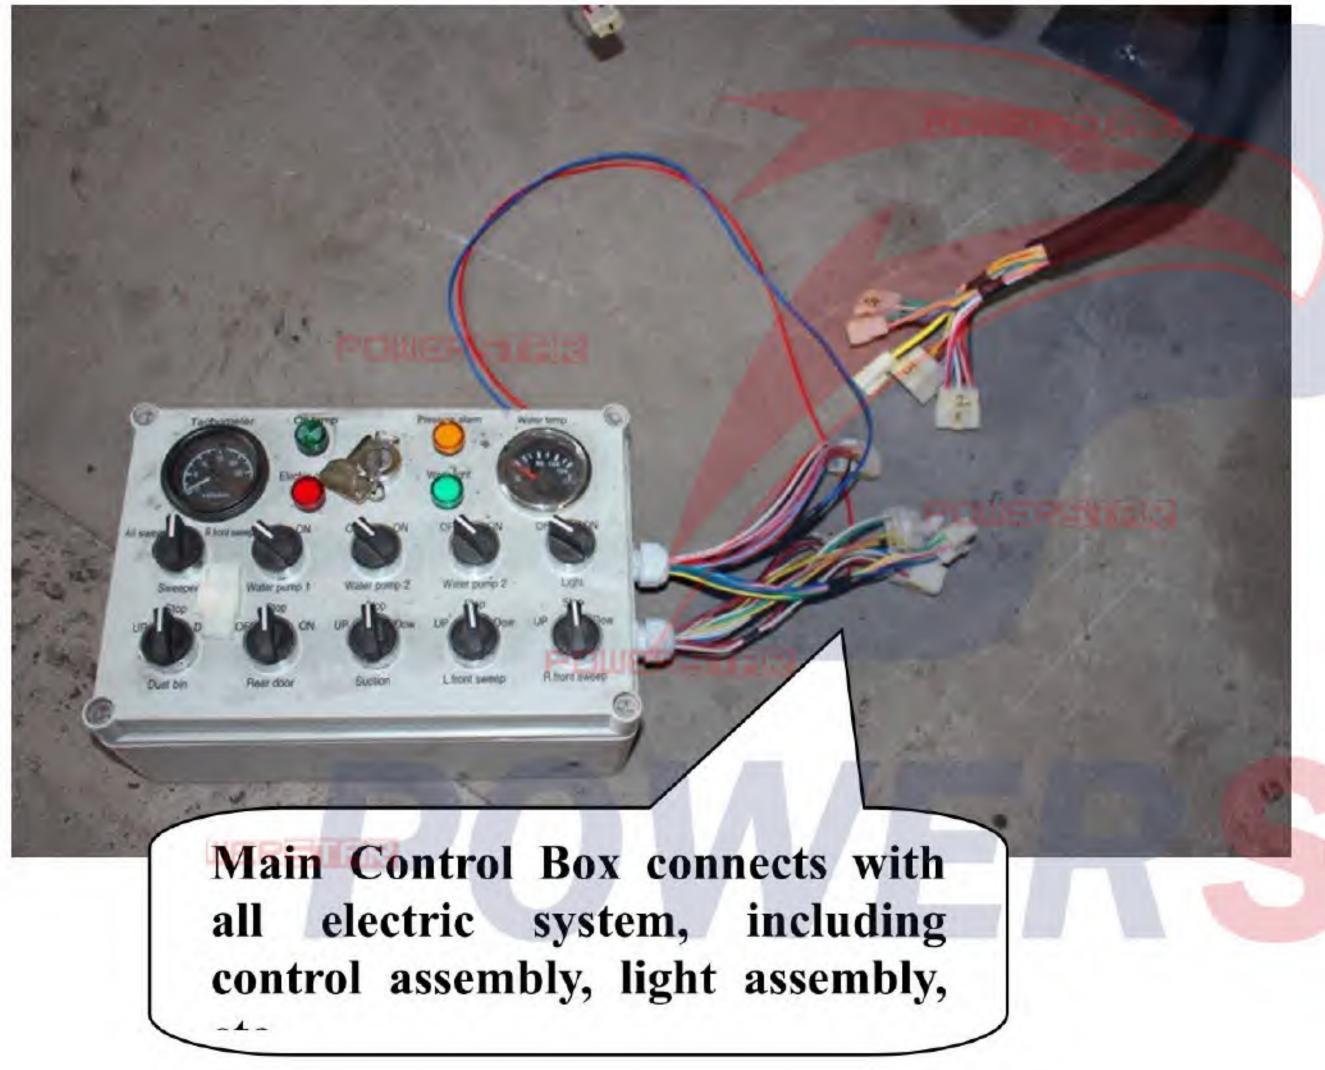




POWERSTER

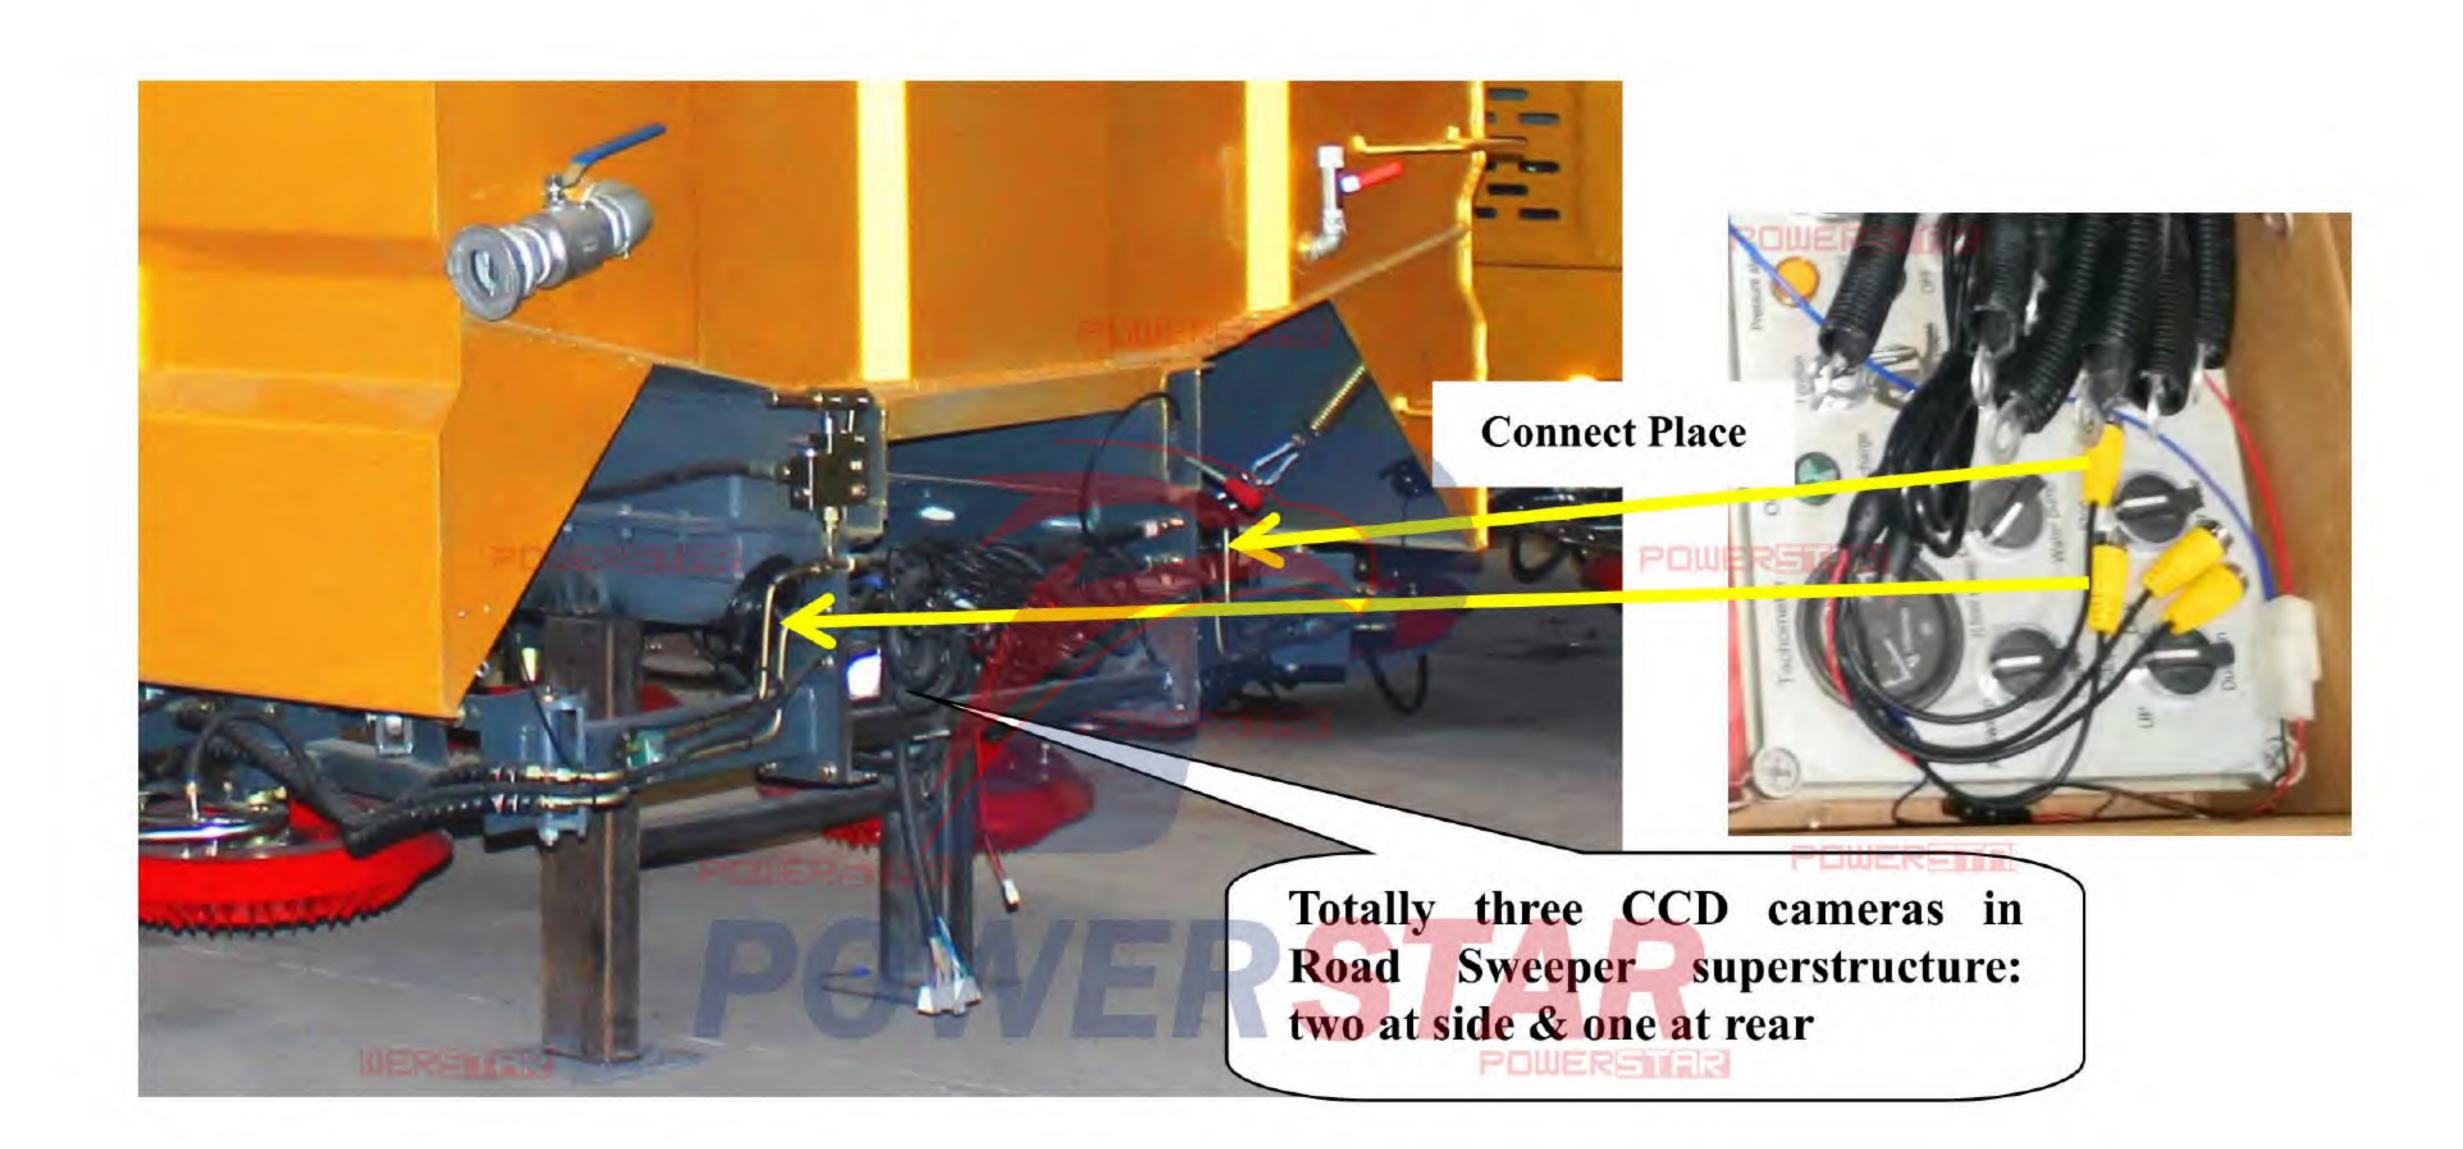




11. Fix the Hand Cable Accelerator, which supposed to be fix in cabin near the seat.

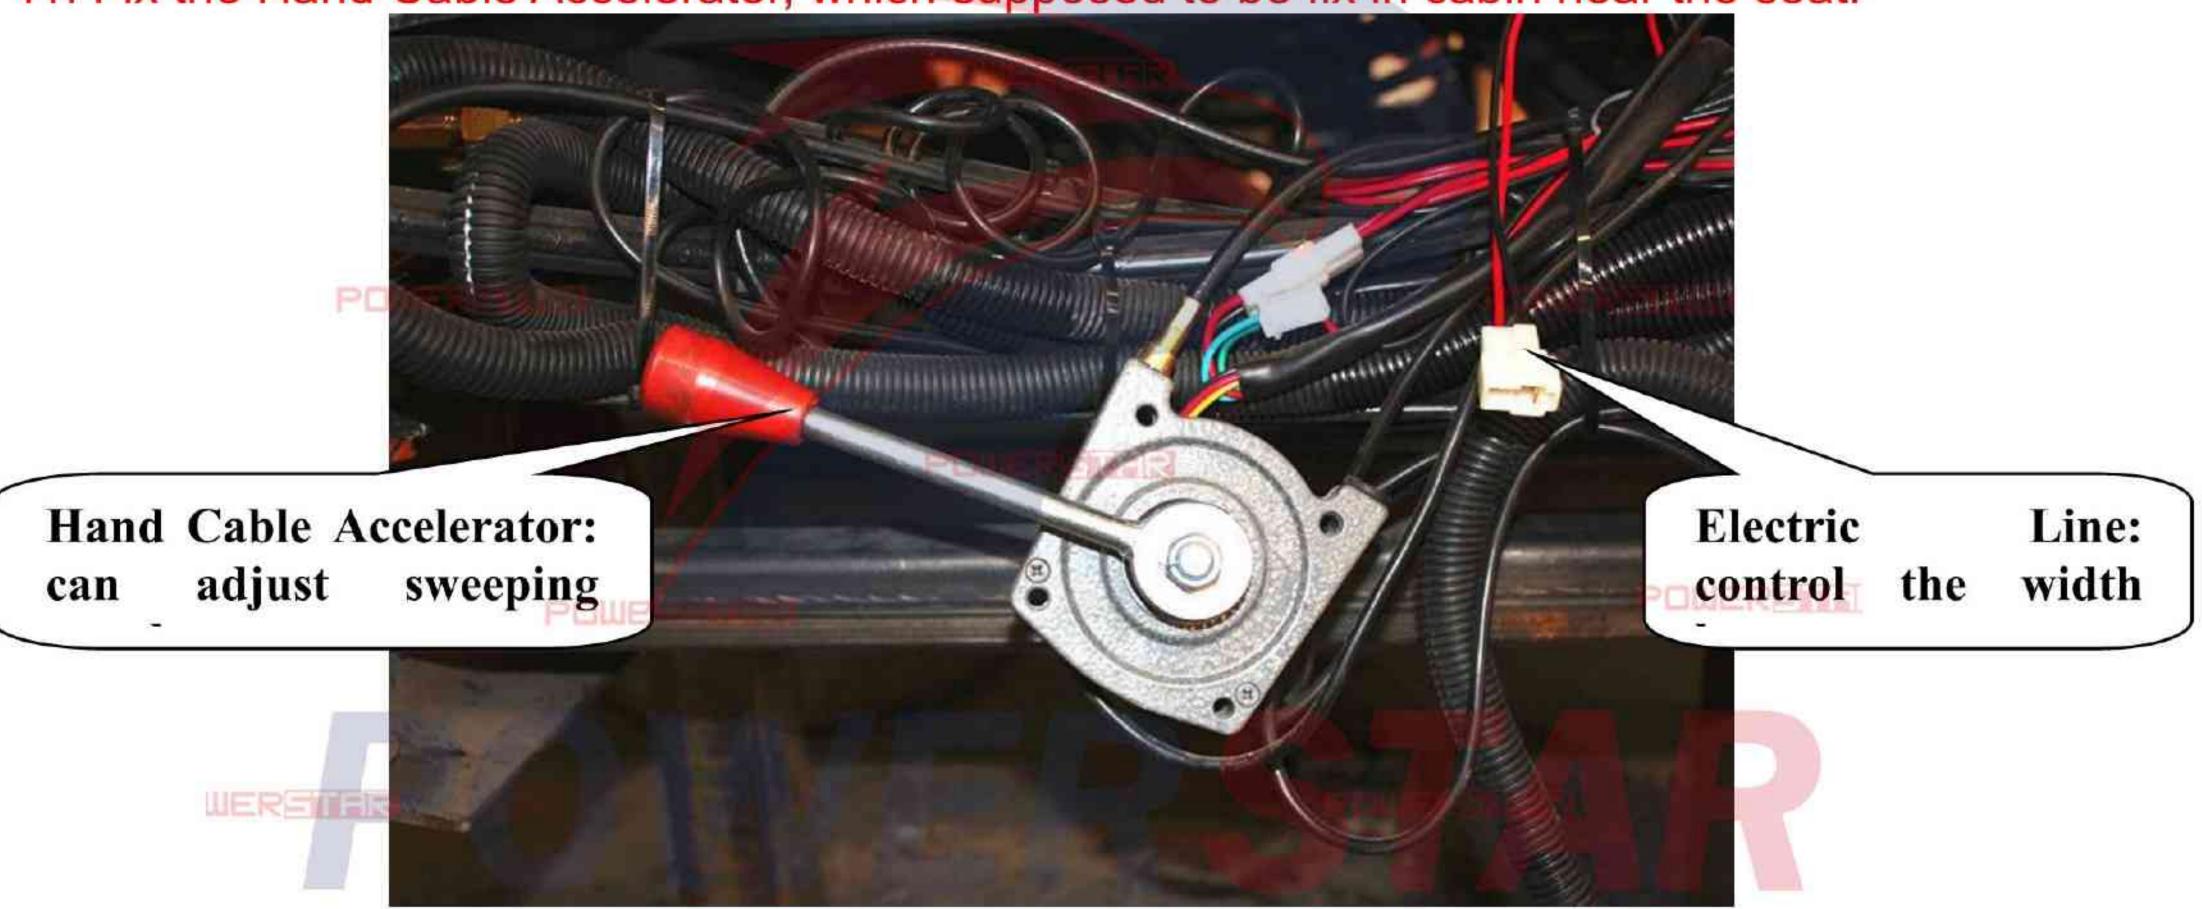


12. Connect the Vacuum Suction Plate & Dust Tank by Vacuum Suction Pipeline

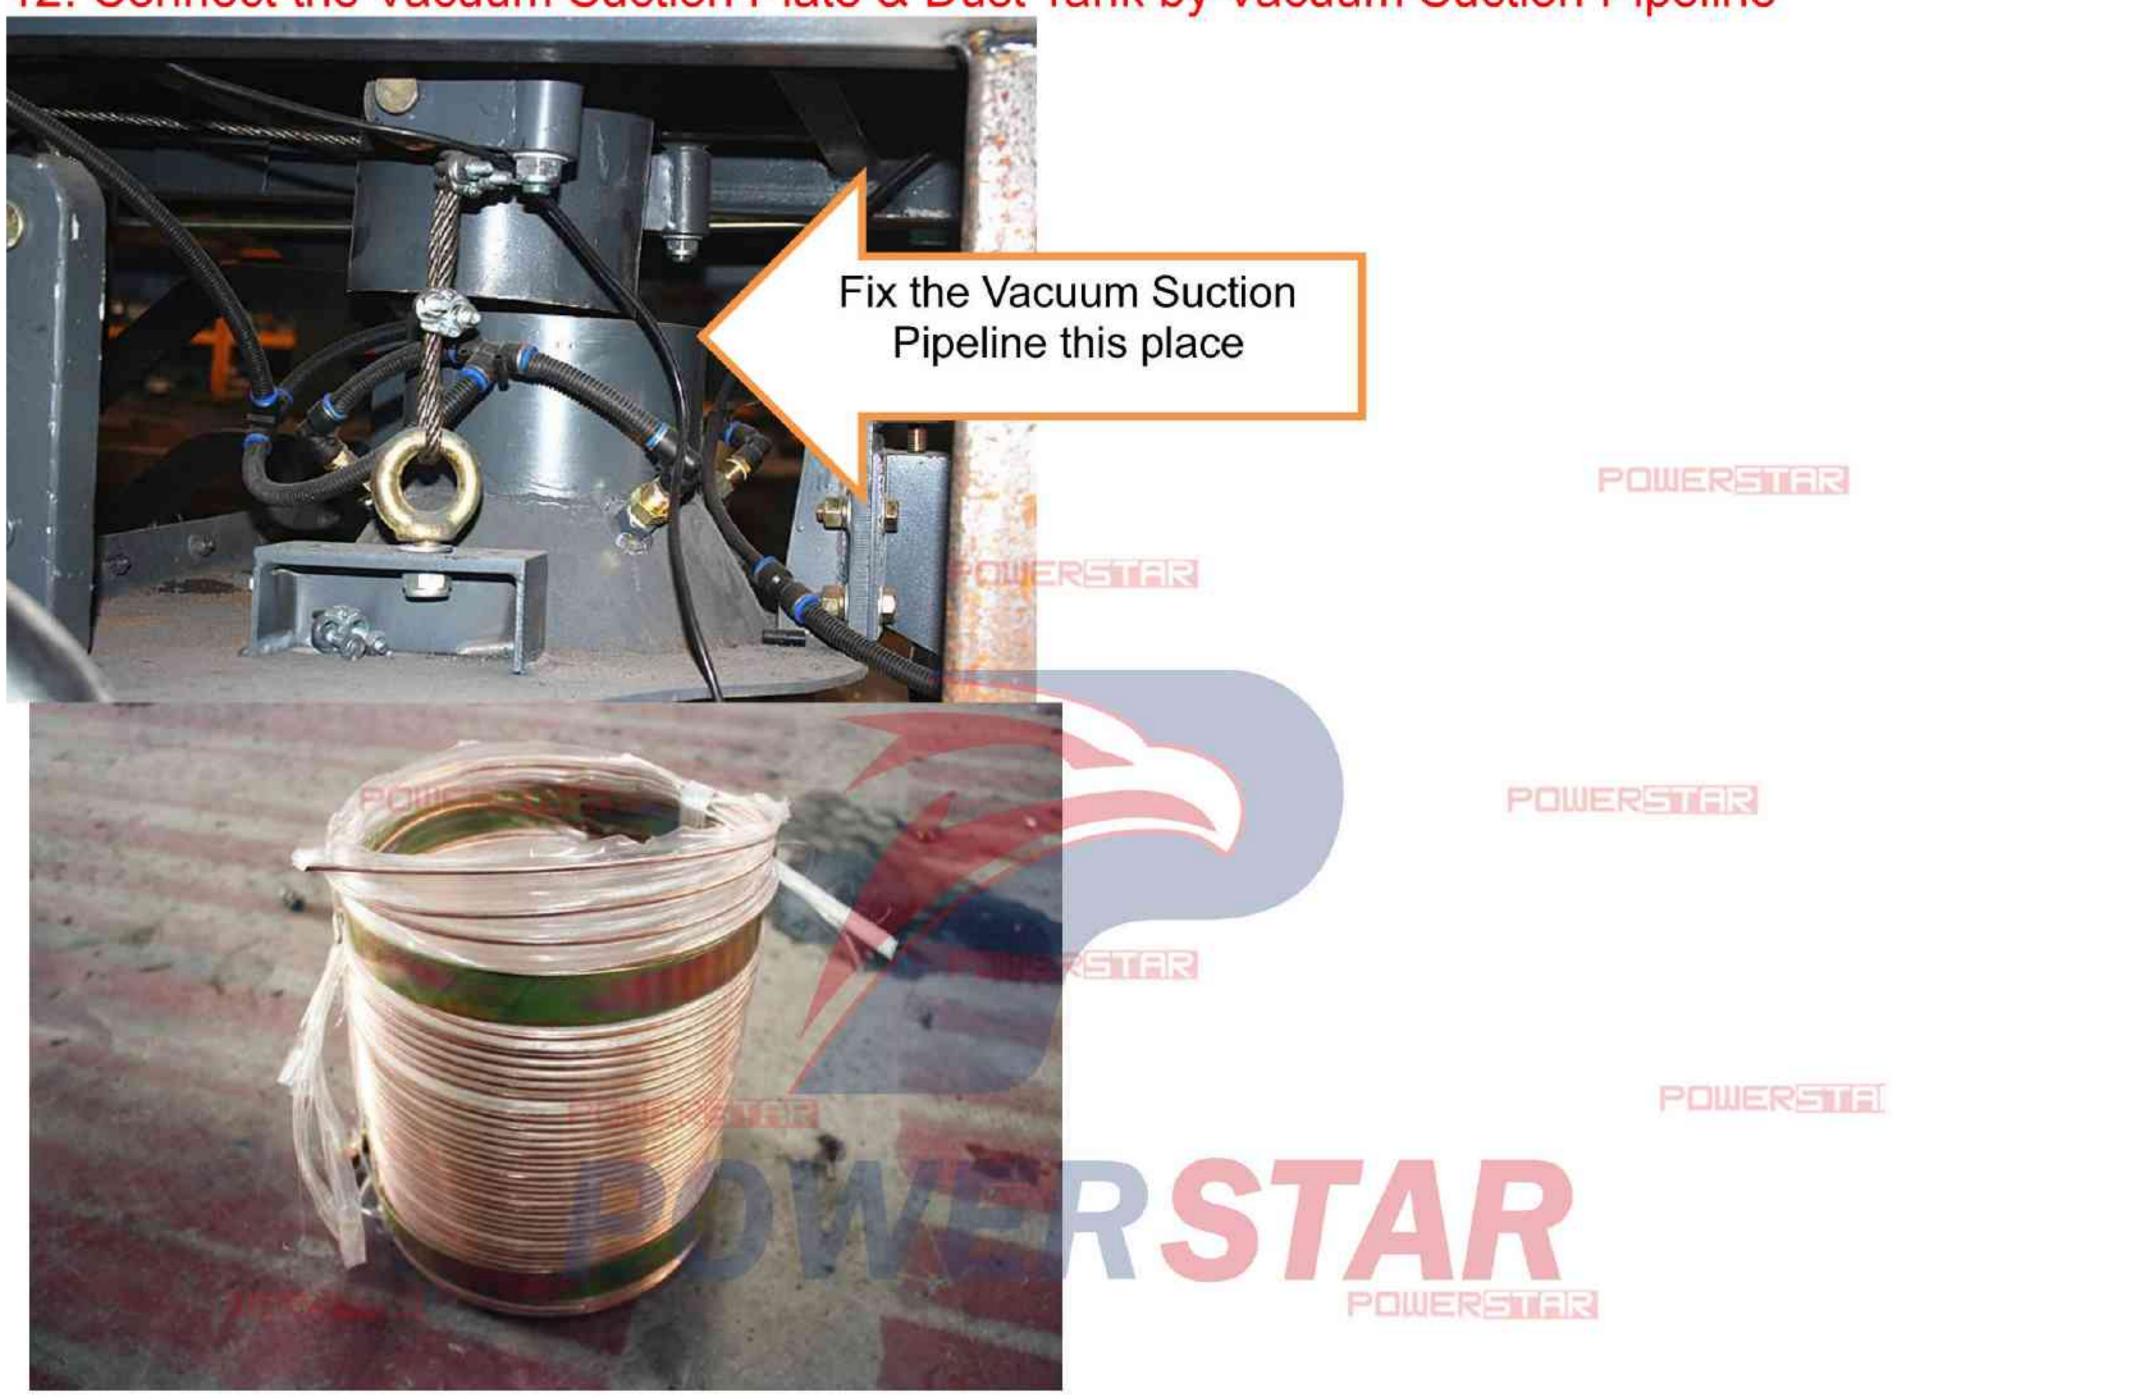



0086 155 7227 0555 info@isuzutruckscn.com

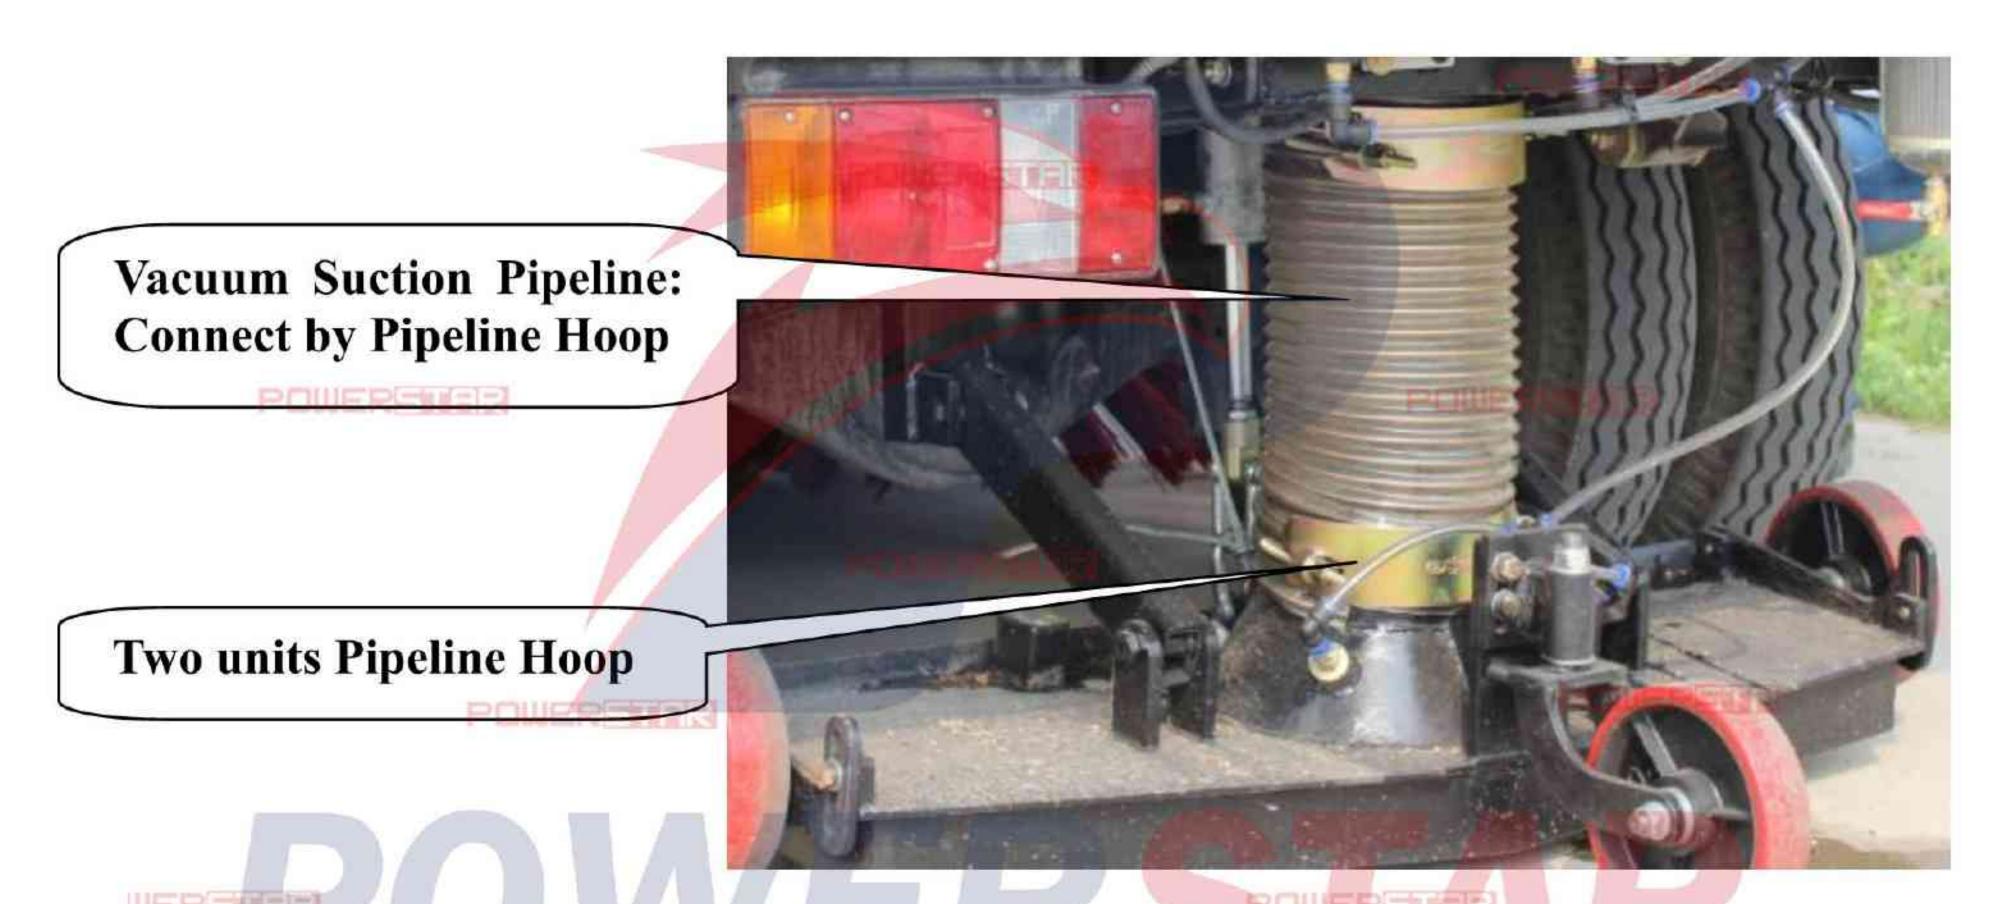

13. Sweeping Plate & Brushes, Fix 22 brushes on one sweep plate, Interval Fixation method would be proper








Take off the sweeping plate, then using hammer fix the sweeping brush on the slot showing above


Please note that: One Sweeping Plate match with Twenty Two Sweeping Brushes

14. Fix Suction Plate Mudapron on the plate and auxiliary chassis

POWERSTIER



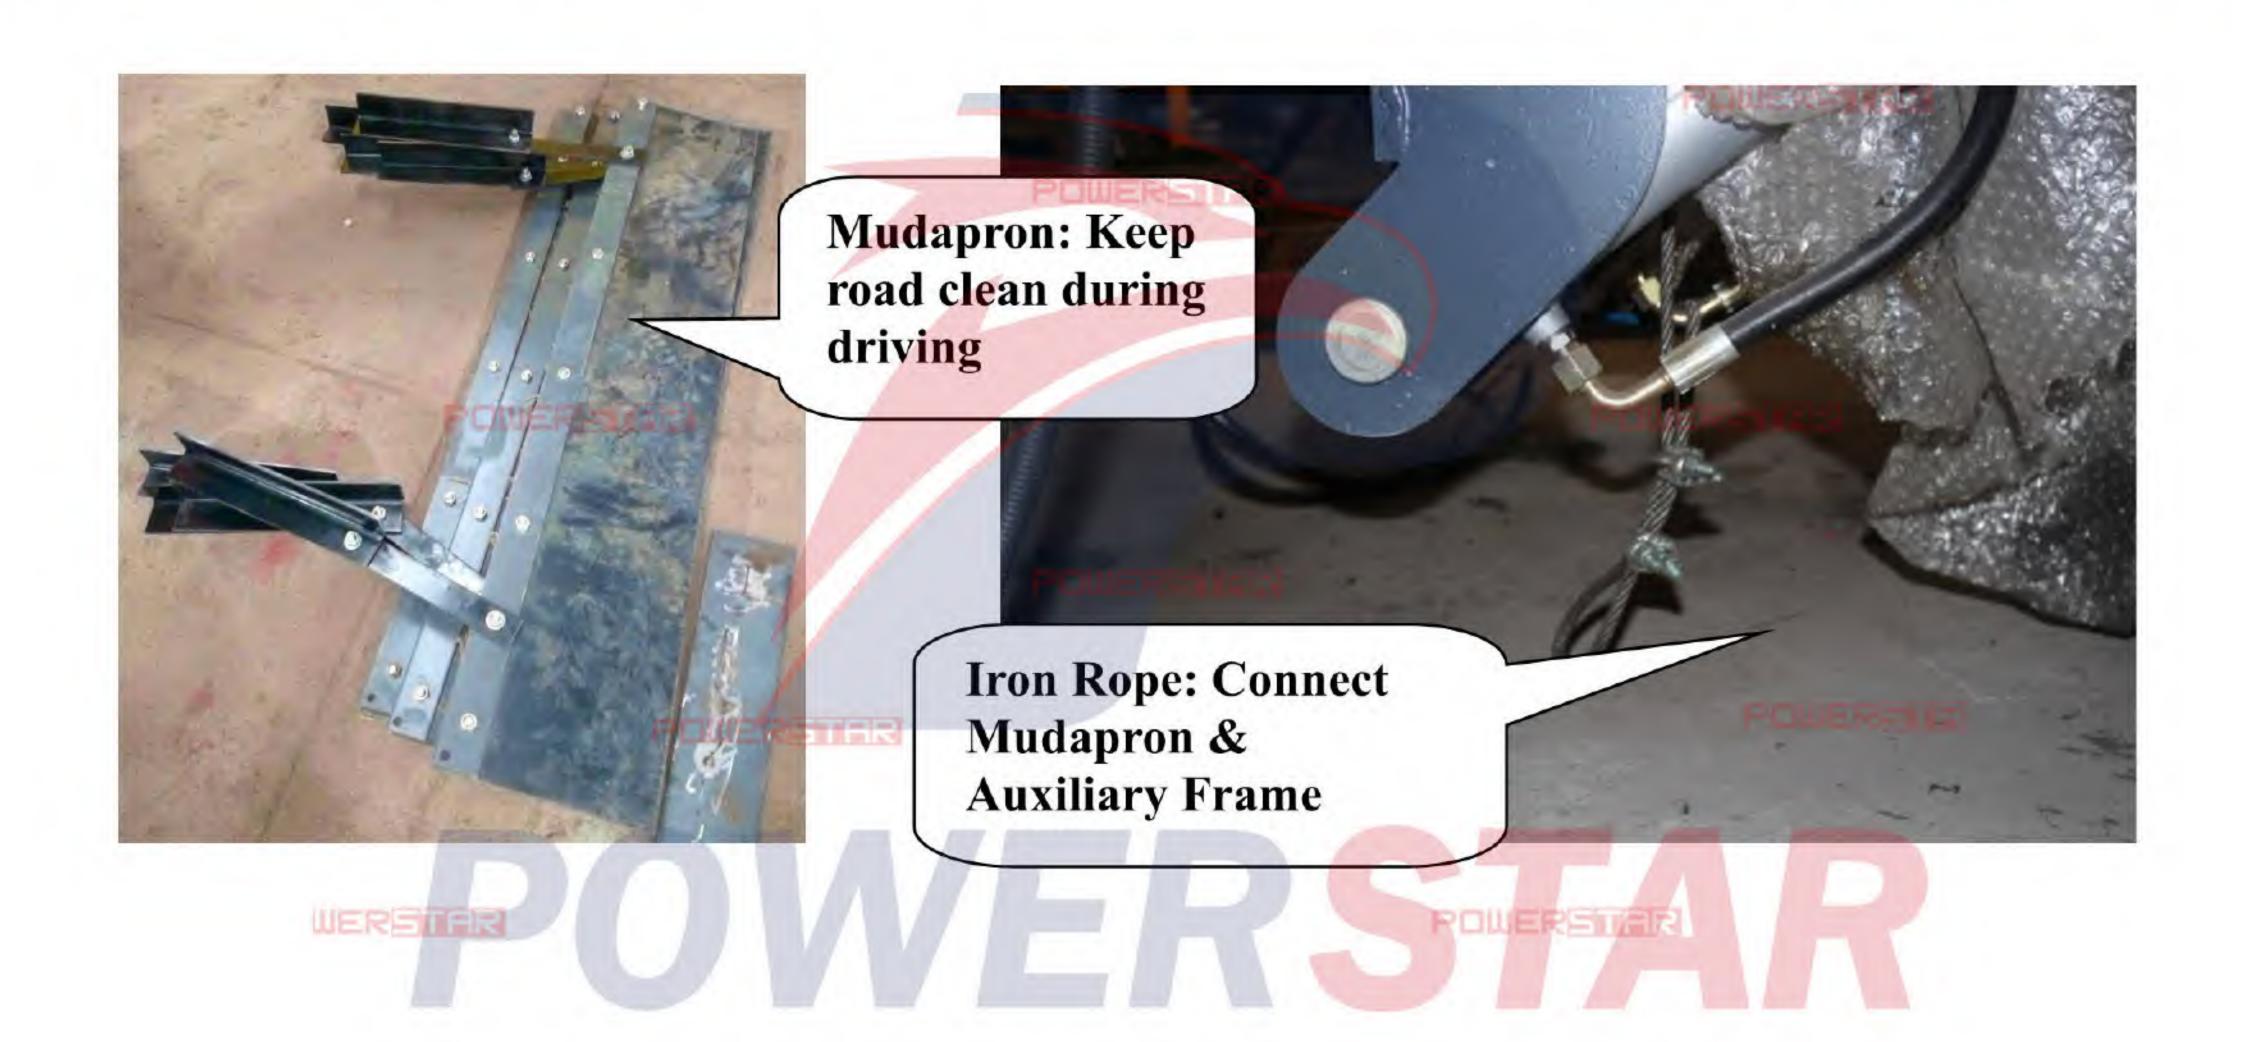

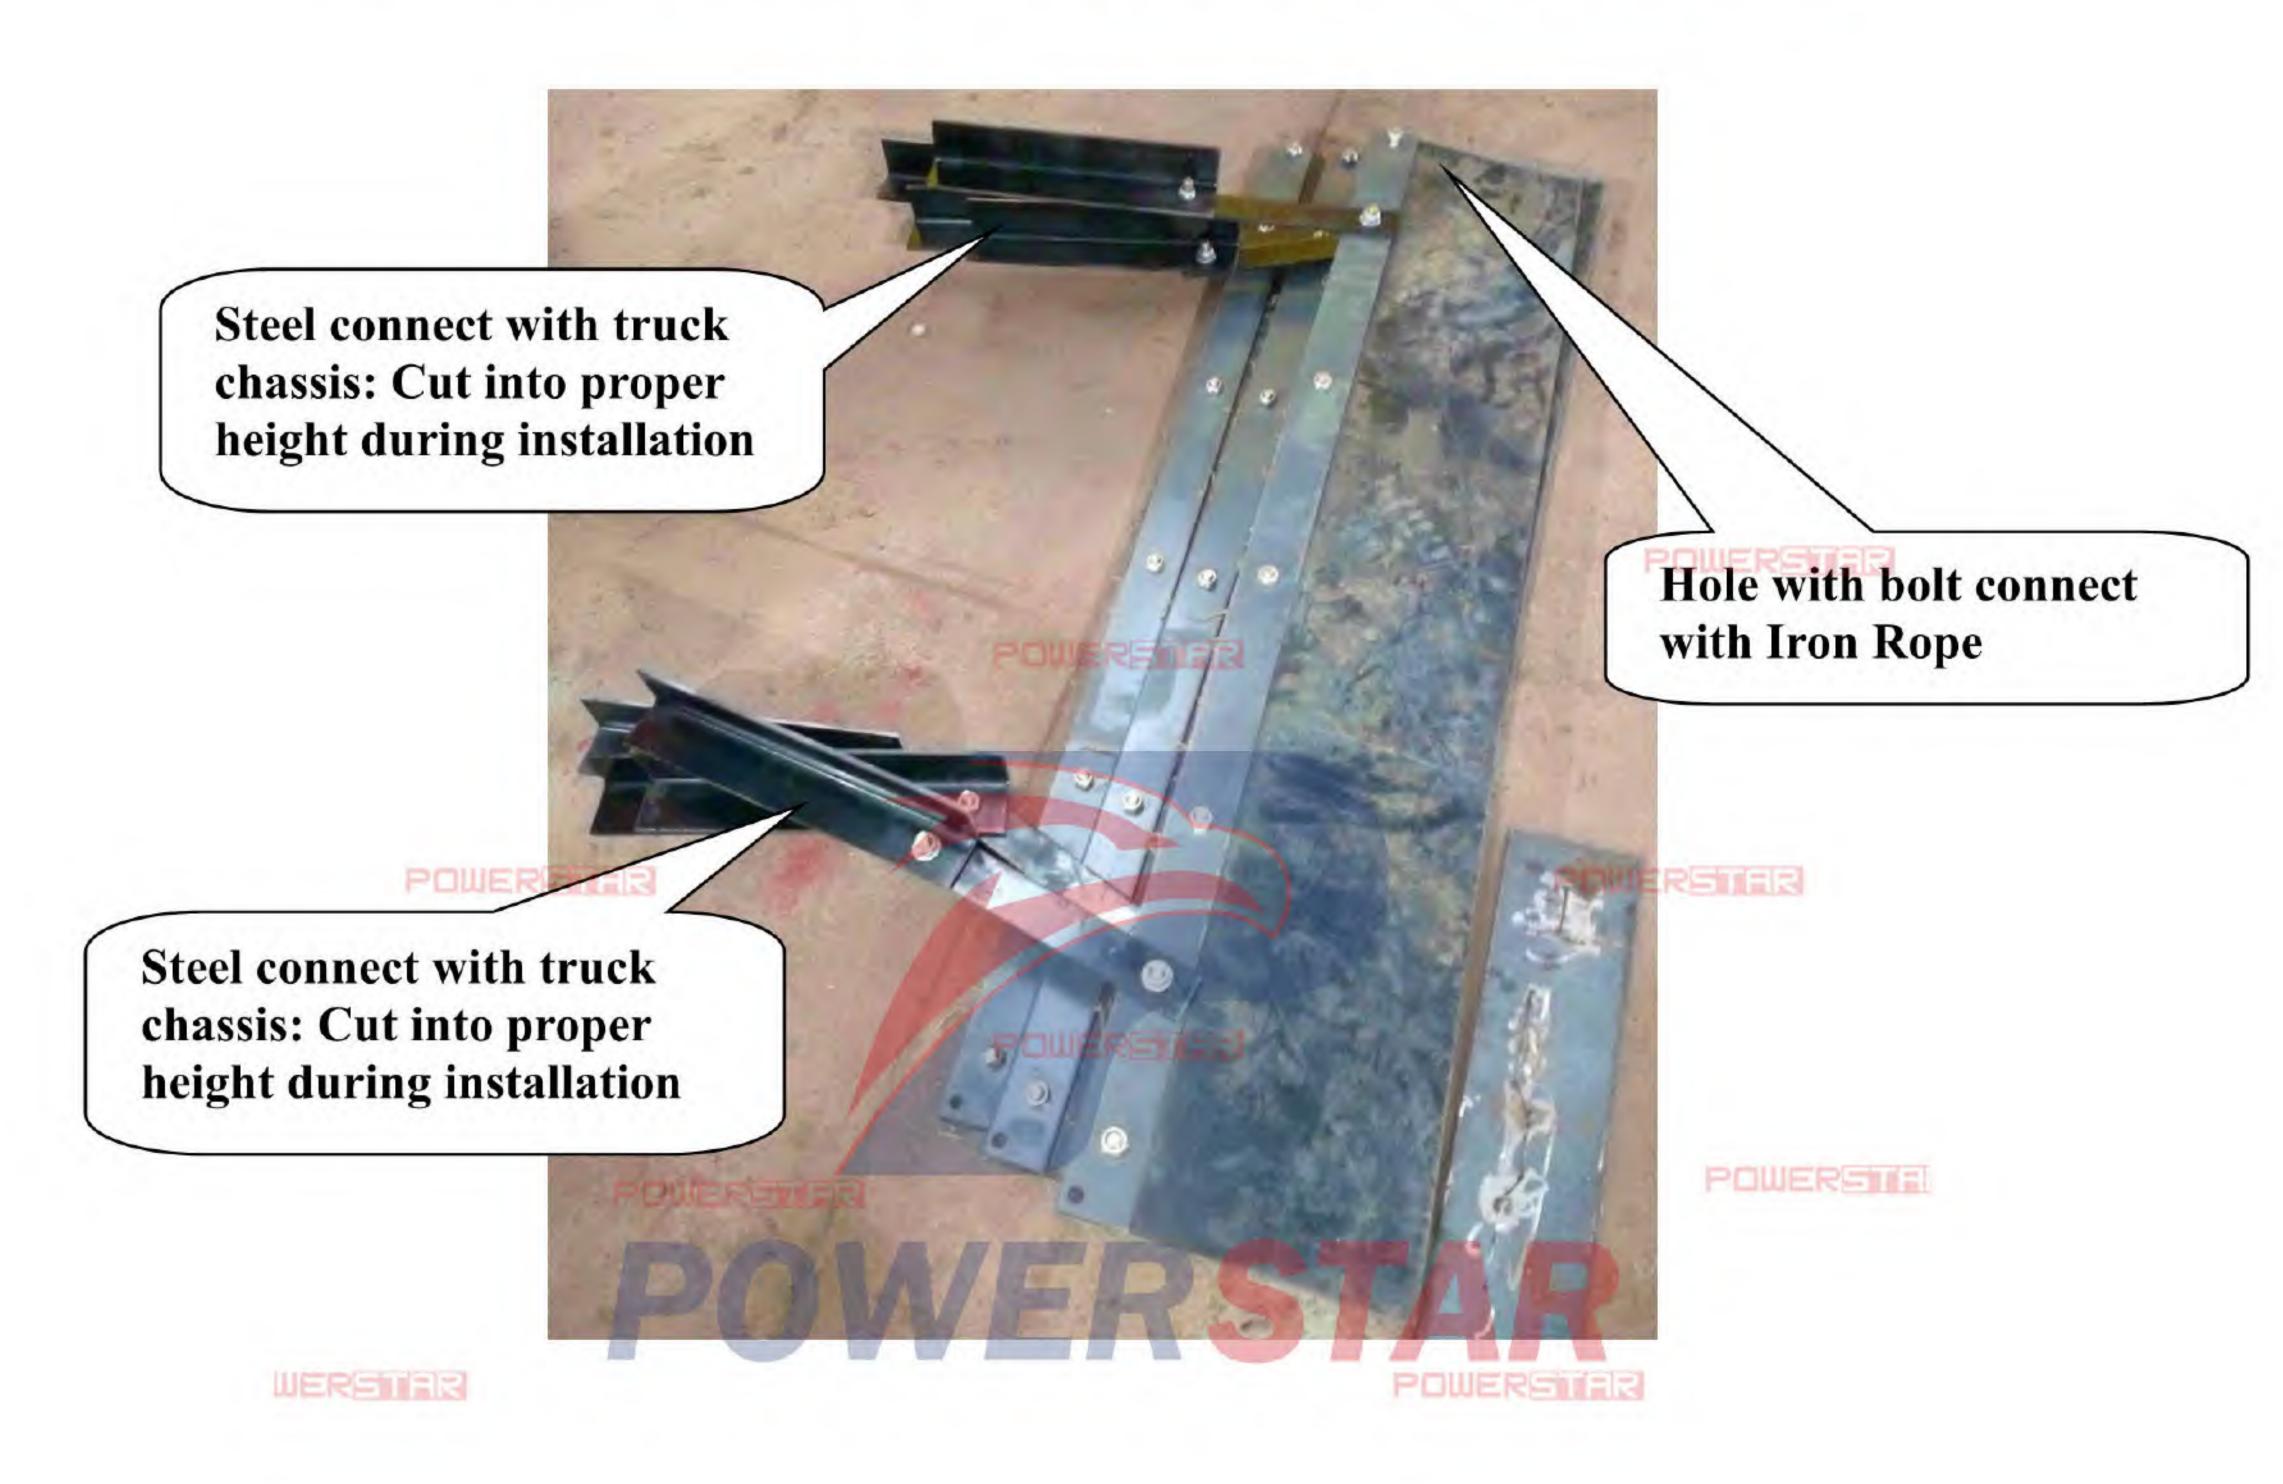





15. Rear Lamp installation guidance



POWERSTER

POWERSTER

16. Clean water tank Liquid Level Indicator installation guidance

POWEREILER

POWERENIES

POWERSTILL



WERSTER





